 


SG-112

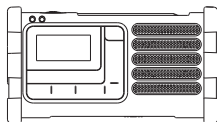

GB

Version 1

Important safety instructions

1. Please read these instructions carefully.
2. Please keep these instructions for future reference.
3. Heed all warnings
4. Follow all instructions
5. Do not use this apparatus near water
6. Clean only with dry cloth
7. Do not block any ventilation openings. Install in accordance with the manufacturer's instructions
8. Do not install near any heat sources such as radiators, heat registers, stoves or other apparatus (including amplifiers) that produce heat.
9. Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
10. Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles and the point where they exit from the apparatus.

11. Only use attachments/accessories specified by the manufacturer.
12. Use only with the cart, stand, tripod, bracket or table specified by the manufacturer or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.
13. Unplug this apparatus during lightning storms or when unused for a long period of time.
14. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture does not operate normally or has been dropped.
15. Apparatus shall not be exposed to dripping or splashing and no objects filled with liquids, such as vases, shall be placed on the apparatus.
16. To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture.
17. Caution: Danger of explosion if battery replaced. Replace only with the same or equivalent type.
18. Battery shall not be exposed to excessive heat such as direct sunlight, fire or the like.

IMPORTANT NOTE:

To comply with the FCC RF exposure compliance requirements, no change to the antenna or the device is permitted. Any change to the antenna or the device could result in the device exceeding the RF exposure requirements and void user's authority to operate the device and all product warranties.

CAUTION:

To reduce the risk of the electric shock, do not perform any servicing other than that contained in the operating instructions unless you are qualified to do so.

 
 
 
 
 
 
For United States:

FC Cautions to the user

The changes or modifications not expressly approved by the party responsible for compliance could void the users authority to operate the equipment.

The equipment has been tested and found to comply with the limits for a Class B Digital Device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instruction, may cause harmful interference to radio communication. However, there is no guaranty that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio / TV technician for help.

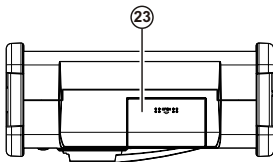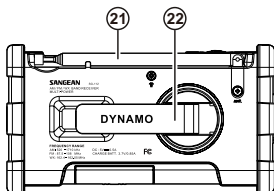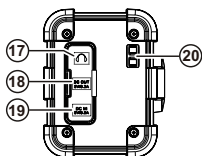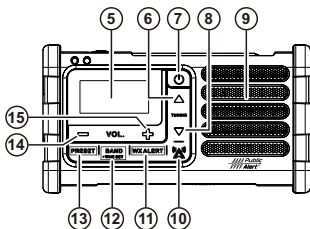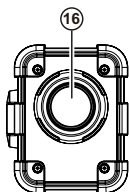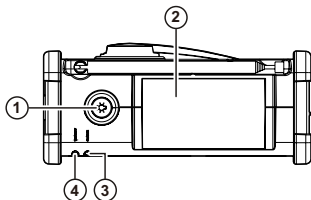


Controls

GB

- ① LED Flashlight switch
- ② Solar charging panel
- ③ Charging indicator
- ④ Weather alert indicator
- ⑤ LCD display
- ⑥ Tuning Up
- ⑦ Power button
- ⑧ Tuning Down
- ⑨ Speaker
- ⑩ Emergency siren button
- ⑪ Weather alert set button
- ⑫ Band selection/ Time set button
- ⑬ Preset station
- ⑭ Volume Control -down
- ⑮ Volume Control - up
- ⑯ LED Flashlight
- ⑰ 3.5 mm headphone socket
- ⑱ USB charging socket to mobile phones or MP3 players
- ⑲ Micro USB charging outlet
- ⑳ Carrying strap holder
- ㉑ Telescopic antenna
- ㉒ Dynamo power hand crank
- ㉓ Battery compartment

LCD display icon

 - Ⓐ Battery power level meter
- Ⓑ Weather alert on
- Ⓒ FM stereo indicator
- Ⓓ Auto shut off indicator
- Ⓔ Memory preset
- Ⓕ Time and radio frequency
- Ⓖ AM/PM local time indicator
- Ⓗ AM Frequency Band
- Ⓘ FM Frequency Band
- Ⓙ (WX) Weather Band

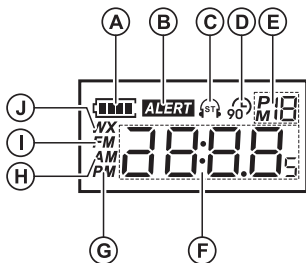

The SG-112 is powered by an 850mAh rechargeable Lithium-ion battery (supplied). Before operating the radio for the first time, ensure that you fully charge the supplied battery.

Inserting the supplied rechargeable battery

1. Open the battery compartment on the back of the unit by pushing the battery door following the arrow direction.
2. Insert the supplied rechargeable battery into the space in the compartment. Make sure the battery is inserted with correct polarity as shown in the compartment.

GB

Recharging the radio

Note:

Please use one of the following methods to recharge your radio or when the battery power indicator LED blinks indicating the battery power is low.

1. Using the supplied USB to Micro USB cable simply plug the USB end into a USB socket on a computer, tablet or any USB power supply. Then plug the Micro USB end into the Micro USB socket on the right hand side of the radio.
2. Using an AC adapter with a Micro USB connector (not supplied) plug the AC adapter into a standard AC outlet. Then plug the Micro USB end into the Micro USB socket on the right hand side of the radio. The battery power icon will illuminate showing that charging is in progress. The CHARGE LED indicator will also be on at the same time during the charging process.

NOTE:

The radio will begin charging the Lithium-ion battery. Charging time will take approx. 2 hours to be fully charged. The battery power icon will stop flashing when the radio is fully charged. Reduced power, distortion, stuttering sounds or when the battery power indicator light is low are all signs that the battery needs to be recharged.

NOTE:

The radio can play approx. 10 hours when the battery is fully charged.

Using Dynamo power

1. Make sure the telescopic antenna is in the rest position before rotating the dynamo handle.
2. Take the Dynamo power handle from its rest position.
3. Rotate the Dynamo power handle approx. 120 rotations per minute, either clock-wise or counter-clock wise until the charging LED indicator appears red.
4. Under normal listening conditions, one minute of charging from Dynamo power will allow you to listen to the radio for approx. 5-7 minutes (AM band mode using the speaker at a moderate volume level).
5. Make sure the handle is in its rest position after charging is completed.

Using solar power

Important:

The radio does not need to be switched on in order for the solar panel to operate.

1. In order to recharge your SG-112 battery using solar power, position the radio so that the solar panel receives direct sunlight. The more direct sunlight that shines on the solar panel, the more electricity it can generate to power the radio.
2. Adjust the position of the radio to achieve maximum brightness of the CHARGE indicator LED.
3. It takes approx. 15 hours to fully charge the battery under direct sunlight.

GB

Note:

The best performance of the solar panel will be achieved when the sun is directly overhead, and the sunlight is unobstructed by clouds, foliage, curtains etc. In certain situations and poor light conditions, the solar panel may not be effective and should not be relied upon as the primary energy source for standard usage. The solar panel is designed as a supplementary energy source which under suitable light conditions is able to contribute up to 100% of the radio energy requirements.

The solar panel will charge the battery only under natural sunlight. It will not deliver a charge in artificial light.

DO NOT attempt to charge the battery by placing the solar panel directly under any kind of sun-lamp, this will cause irreversible damage to the radio and may damage the casing. (Doing so will void all warranties)

Setting the clock

You can set the clock with either the radio turned on or off.

After the radio is charged, the display will appear with (- : --) Press and hold BAND/TIME SET button until the hour setting begins blinking. Select the hour by pressing Tuning UP/Down button until desired hour is displayed. Press BAND/TIME SET button again to set the minutes. The minute indicator should now be blinking, press the Tuning button UP/DOWN until the desired minutes are displayed. Press BAND/TIME SET button again to complete clock setting. The time should display solidly with the colon blinking periodically.

Radio operation

Note:

The SG-112 features a 90 minute auto shut off feature.

Turn on the radio, press and hold the power button for approx. 1/2 second, the radio will turn on and the 90 minute auto shut off icon will appear on the display indicating the radio will auto shut off after 90 minutes of operation. If you don't require this feature, press and hold the power button a little bit longer until the icon disappears from the display.

Turn off the radio by pressing the Power button for approx. 1/2 second until the display shuts OFF. The radio will appear with the clock time in the display.

Tuning the radio - using Seek Tuning, Manual Tuning and Memory preset recall.

Seek Tuning

Turn the radio on by pressing the Power button. Select the desired band by pressing the BAND button.

Press and hold the Tuning UP/Down button for approx. 1/2 second, the radio will seek for the next active station. Repeat as many times until the desired station is found.

GB

Manual tuning

Turn the radio on by pressing the Power button; select the desired band by pressing the Band button. Press Tuning Up/Down button repeatedly until the desired frequency is found.

To Preset stations

1. Turn the radio on and use seek tuning or manual tuning as described above to tune to your desired station.
2. Press and hold the PRESET button for approx. 2 seconds until the display blinks M (Memory) to enter the preset mode.
3. When the M (Memory) display blinks with the previous preset station frequency, press the Tuning UP/Down button to select the desired memory position as shown on the display.

4. Press the PRESET button again to complete the memory setting, the display will appear with a P (preset) and the chosen preset position. After the P and preset position disappear from the display, you may then press the Tuning UP/Down button again to tune to next desired station.
5. This radio features a total of 19 preset memories in random selection for AM/FM

Recall stations

1. Turn on the radio, press the PRESET button to enter the preset mode, the display will show your last preset station position.
2. Press the Tuning Up/Down button to select your desired preset station.
3. Press and release the PRESET button to skip preset mode, the P (preset) and preset position will disappear. You may then press the Tuning UP/Down button to tune to the next desired station.

Telescopic Antenna

The telescopic antenna is used for the FM and Weather Band reception. Extend fully and rotate for the best FM and Weather Band reception. There is a built-in directional bar antenna for the AM band reception. To achieve the best AM reception, it may be necessary to move the radio to achieve proper reception.

GB

Volume Control

Press the Volume Control Button (+/-) to adjust the desired level of sound.

Changing the AM/FM tuning step

In Europe and other parts of the world the AM tuning step is 9 kHz, in North America the AM tuning step is 10 kHz. FM tuning steps also vary from country to country. To change the AM/FM tuning step, proceed as follows.

1. When the radio is turned OFF, press and hold the PRESET button for approx. 2 seconds, the display will first show software version (e.g. P01) then blink the FM tuning step 100 (kHz). During the blinking, press Tuning UP/DOWN to cycle through 100 and 50 (kHz) tuning step. Press PRESET button again to choose your desired FM tuning step.
2. The display will then blink the AM tuning step 10 (kHz), press Tuning UP/DOWN button to cycle through 10 and 9 (kHz). Press the PRESET button again to choose your desired AM tuning step.
3. The radio will default to clock mode (radio is off) after re-setting tuning step.

Note:

Re-setting the AM tuning step will erase all the preset AM stations.

Note:

Re-setting the FM tuning step will not erase preset FM stations.

Weather Band and weather alert operation

Listening to the Weather Band

1. Turn on the radio and press the BAND button to cycle through AM/FM/WX (Weather Band).
2. When the radio is in the WX (Weather Band) mode, press the Tuning UP/Down button to select desired Weather Band channel.

GB

Programming the Weather Alert function

1. Turn the radio on
2. Tune to the strongest Weather channel station
3. Proceed to activate the Weather Alert function

Activating the Weather Alert

You can set the Weather Alert when the radio is switched on or off.

1. Press and hold WX ALERT button until the display shows WX ALERT
2. After the WX ALERT is broadcast the alert siren will be activated for 15 seconds then play the selected weather channel broadcast automatically. During the 15 second alert siren period, the WX ALERT indicator and LED Flashlight will both blink. You can press any button (except Flashlight button) on the radio to stop the alert siren and press the selected weather channel broadcast.

3. The WX ALERT LED will continue to blink for approx. an hour until you press any button (except Flashlight button) to acknowledge the alert message from the WX station.
4. To cancel the WX ALERT setting, simply press and hold WX ALERT button until the display shows OFF.

Emergency Siren

The Emergency Siren will work when either the radio is switched on or off. Simply press and hold Emergency Siren button for 1 second, this will activate the siren until it's switched off by pressing the Emergency Siren button for 1 second or the Power button.

LED Flashlight

The SG-112 features 4 selections for the LED Flashlight. Press the LED Flashlight button once for High, again for Low, again for Blinking once more for SOS (Morse Code Distress Signal, three short flashes, three long flashes, three short flashes) and one more time to shut the Flashlight off. Or in any mode you can hold the Flashlight button down until the Flashlight shuts off.

Listening with Headphones

Plug the headphones into the headphone socket for private listening. This will disconnect the external speaker.

Charging mobile phones and MP3 players

The SG-112 features a USB charging socket to charge your mobile phone or MP3 player and related devices with the its built-in Lithium-ion battery.

1. In order not to interfere with radio listening, we suggest to charge your mobile phone, MP3 player and related devices when the radio is switched off.
2. The USB charging socket can provide a maximum of 500mAh of charging current.

GB

Strap holder

You may attach the supplied carrying strap into the strap holder for easy transport.

Conditional water resistant

This radio is a water resistant device NOT a waterproof device. Please ensure the rubber cover on the USB, Micro USB and Headphone jack section is properly secured.

Specifications

Power Supply:

850mAH rechargeable Lithium-ion battery (supplied)
x 1

Dynamo - charging to rechargeable Lithium battery.

Solar panel - charging to rechargeable Lithium battery

Optional Power Supply:

AC power adaptor with Micro USB connector, (not included)

Audio Output: 400 mW

(DC In (5V/0.5A) Micro USB B Type Socket for Charging the SG-112. USB A to Micro B Cable & Hand strap included)

Frequency Coverage

FM (VHF): 87.50 - 108 MHz

WX (VHF): 162.40 - 162.55 MHz

AM: 520 - 1710 kHz (10 kHz tuning step)

522 - 1710 kHz (9 kHz tuning step)

Antenna:

Telescopic antenna: FM /WX (VHF)

Built-in Ferrite rod antenna: AM

Socket

DC Socket: DC IN Micro USB 5V 500 mA

DC OUT USB Type A 5V 300 mA

Earphones Jack:

3.5, mm in diameter, Stereo, 32 ohm Impedance

Dimension: 152 x 85 x 69 mm (W x H x D)

GB

Weight: 400g (excluding battery)

The company reserves the right to amend the specification without notice.



If at any time in the future you should need to dispose of this product please note that: Waste electrical products should not be disposed of with household waste. Please recycle where facilities exist. Check with your Local Authority or retailer for recycling advice. (Waste Electrical and Electronic Equipment Directive)