


# DDR-63

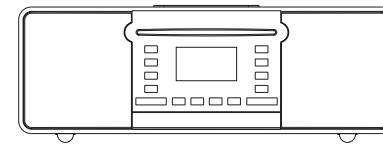

**GB**

Version 1



iPod is a trademark of Apple Inc., registered in the U.S. and other countries. "Made for iPod" means that an electrical accessory has been designed to connect specifically to iPod and has been certified by the developer to meet Apple performance standards.

Apple is not responsible for the operation of the device or its compliance with safety and regulatory standards.

## Contents

<b>Introduction</b> .....	3-10	Scan tuning .....	54
Before you can use this product .....	3	Stereo/Mono switching .....	55
Controls and connections .....	4-5	Presetting stations in DAB and FM modes .....	56
Remote control operation .....	6-8	<b>CD/MP3/WMA</b> .....	57-65
Navigation controls .....	9	Compact discs .....	57
<b>Network configuration</b> .....	10-18	Playing a CD .....	58-60
Connecting your radio to your computer network .....	10-18	CD track programming .....	61
<b>Internet Radio mode</b> .....	19-32	CD/MP3/WMA mode .....	62-65
Internet Radio-the basics .....	19	<b>SD/USB playback and recording</b> .....	66-74
Selecting a radio station by location and genre .....	20-22	SD/USB file and folder selection .....	68-69
Searching for a radio station by name .....	23	Recording to SD/USB .....	70-72
Selecting a new or popular station .....	24	Deleting files .....	73-74
Selecting a podcast/BBC Listen Again .....	25	<b>iPod docking</b> .....	75-76
Presetting stations .....	26	Navigating your iPod .....	76
Display modes .....	27-28	<b>Clock and Alarms</b> .....	78-86
Customizing your radio .....	29-30	Automatically updating the clock .....	78
Selecting favorite stations .....	31	Manually setting the clock .....	80-81
<b>Music Player mode</b> .....	33-43	Setting the alarm clock .....	82-86
Use with Windows, Apple Mac and Linux .....	33	Sleep timer .....	86
Accessing your files via UPnP .....	34-35	<b>Display and Auto</b> .....	87-94
Locating and playing media files using UPnP .....	36	Equalizer .....	87-88
Media selection .....	37	Brightness control .....	89-90
Controlling playback .....	38-39	Touch sensitivity control panel .....	91
Display modes .....	40	Headphone socket and Line out socket .....	92
Playlists .....	41	Auxiliary input socket .....	93-94
<b>Pandora mode</b> .....	44-50	<b>Information</b> .....	95-103
Pandora-the basics .....	44	Factory reset .....	95
Set up a Pandora user account .....	45	Software update .....	96
Selecting an account .....	46	Network profiles .....	97
Deleting an account .....	47	Audio FAQ .....	98
Delete/rename a station .....	48	Accessing your audio files via a UPnP server using Windows Vista and XP .....	99-100
Create a new station .....	49	Codecs .....	101
Current playing track management .....	50	Cautions and Specifications .....	102-103
<b>FM mode</b> .....	51-56		
Manual tuning .....	52		

## Before you can use this product

Before you can use your internet radio, you must have the following:

- A broadband Internet connection (not required for FM or Music Player functions).
- A wireless access point (WiFi) or a wired Ethernet connection connected to your broadband Internet Service Provider, preferably via a router. In many cases the broadband modem, router and wireless access point will be a single combined unit supplied by your Internet Service Provider or bought from a computer store.
- If your wireless network is configured to use Wired Equivalent Privacy (WEP) or WiFi Protected Access (WPA/WPA2) data encryption then you either need to know the WEP, WPA or WPA2 key used for encryption so you can get the internet radio to communicate with the network, or your router needs to offer WiFi Protected Setup (WPS).


If connecting using WiFi, the internet radio will typically work within a 10-20 metre radius from your wireless access point. The actual range achieved will depend upon the building type, other nearby wireless network, and possible interference sources. FM radio functions can operate wherever the internet radio is able to receive a suitable broadcast signal.

### **IMPORTANT:**

Before you continue, make sure that your wireless access point or router is powered up and working with your broadband Internet service (use your computer to verify this). To get this part of the system working you must read the instructions supplied with the wireless access point or router.

## Controls and connections

(Front view)

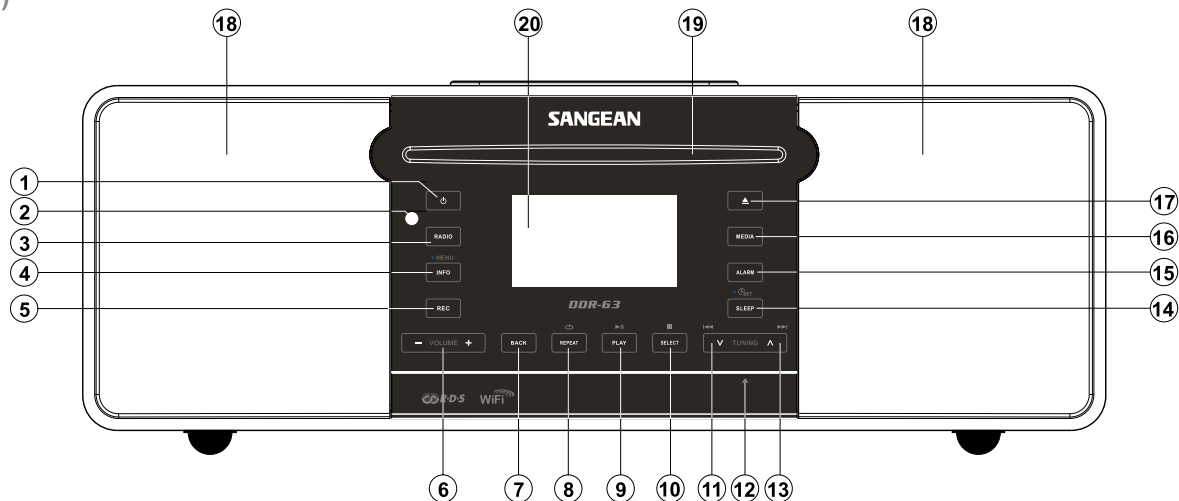


1. Standby button
2. Remote control sensor
3. Radio button
4. Info / Menu button
5. Record button
6. Volume Up / Down button
7. Back button

8. Repeat button
9. Play / pause button
10. Select / stop button
11. Tuning Down / Rewind button
12. SD card / USB memory socket (behind panel)
13. Tuning Up / Fast-forward button
14. Sleep / Clock set button

15. Alarm button
16. Media button
17. CD Eject button
18. Loudspeakers x 2
19. CD slot
20. LCD display

## Controls and connections

### (Rear View)

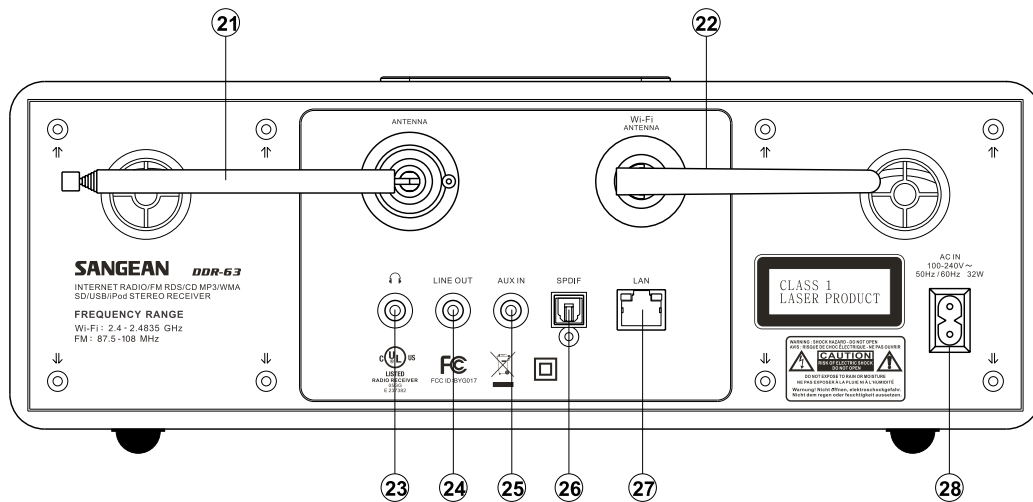


- 21. Telescopic aerial
- 22. Wi-Fi antenna
- 23. Headphone socket
- 24. Line output socket

- 25. Auxiliary input socket
- 26. Optical output socket (Toslink)
- 27. Ethernet socket (RJ-45)
- 28. Mains input socket

## Remote control handset

- A. On / Standby button
- B. Mute button
- C. Key pad button 1-10 / 0
- D. Select / Stop button
- E. Tuning Down / Rewind button
- F. Info / Menu button
- G. Repeat button
- H. Media button
- I. Sleep / Clock set button
- J. Record button
- K. Equalizer button
- L. Alarm button
- M. Radio button
- N. Auto-tune / Program tracks button
- O. Random button
- P. Play / Pause button
- Q. Folder Down button
- R. Tuning Up / Fast-forward button
- S. Folder Up button
- T. Volume Up / Down buttons
- U. CD eject button

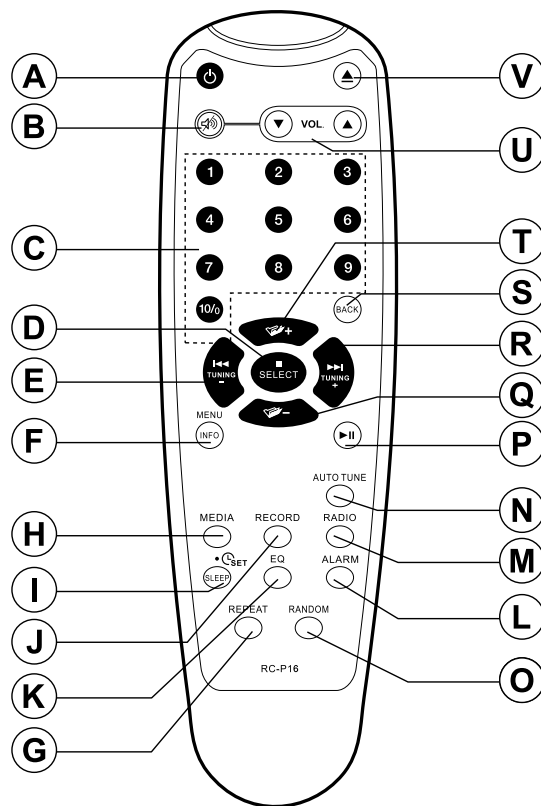

GB

## Remote control battery replacement


1. Remove the battery cover on the rear of your remote control by applying pressure to the catch in the direction shown by the arrow in the diagram, and then lifting the cover.
2. Insert 2 x AAA size batteries into the compartment. Make sure the (+) and the (-) ends of the batteries are positioned as shown inside the compartment.
3. Close the battery cover by inserting the retaining lugs first, then apply pressure to the free end such that the catch latches the cover securely.
4. If the remote is not to be used for an extended period of time it is recommended that the batteries are removed.

### IMPORTANT:

The batteries should not be exposed to excessive heat such as sunshine, fire or the like. After use, disposable batteries should if possible be taken to a suitable recycling centre. On no account should batteries be disposed of by incineration.

Do not leave batteries within reach of young children. They can be a choking hazard.

1. Battery compartment
2. Latch
3. Retaining lugs (inside)

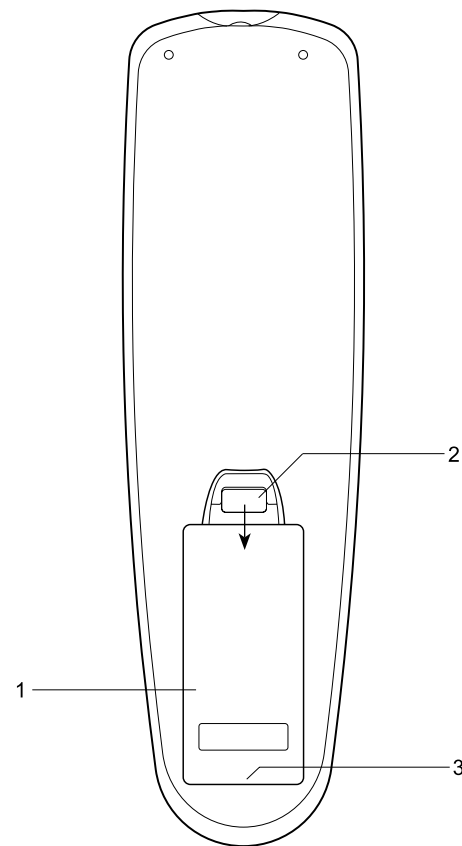



## Using the touch panel

The has a stylish touch panel instead of conventional buttons.

To operate the buttons simply touch the button area with the tip of a finger for about half a second. The clock set and system menu functions marked with a dot (●) are accessed by means of a long touch (2-3 seconds) on the appropriate button until the display on the radio shows that the command has been accepted.

You may find at first that the radio does not always detect that you have touched a button. If so, try touching with a little more pressure, or for slightly longer. You will soon find the optimum touch needed to control your radio. The panel may be cleaned using a dry cloth. Do not use abrasives, cleaning fluids or solvents.

## Remote control functions

Most of the functions of the radio can be controlled using either the touch panel or the remote control. However, there are a few functions which are only accessible using the remote control.

These are:

Radio station presets

CD track access by numbers

Audio mute

FM auto-tune

CD/iPod random function


As with the front panel, some operations require a longer operation of the button (explained in the relevant sections). In this case simply keep your finger held on the remote control button for 2-3 seconds until the display on the radio shows that the command has been accepted.

## Navigation controls

This page describes the basic means of controlling your internet radio. Instructions for each operating mode are given in the later section of this book.

1. Pressing the Standby button brings your radio out of Standby mode. Pressing Standby while the radio is in use will cause it to return to the Standby mode with the clock display.
2. Pressing the Radio button gives you access to each of the operating modes in turn: Internet Radio, radio, FM radio and Auxiliary Input.
3. Pressing the Media button gives you access to each of the operating modes in turn: CD, USB memory device, SD cards, iPod and Music player.
4. Pressing and holding the Info/Menu button will access the menu system. The info button also allows the display of information relating to the radio station or music file being played.
5. Many operations require the user to make a selection from the menu. Highlight the menu item using the Tuning Up or Tuning Down buttons on the touch panel (alternatively, the Folder Up or Folder Down buttons on the remote control handset). Press the Select button to select that item. If there are more than five items in a menu, then the display will automatically scroll up or down so that the additional items become visible. A sliding bar on the right will give an indication showing the current portion of the menu that is displayed. If there are many items in a menu, then the radio allows the menu to “wrap around” in either direction. This can make it easier to reach items at the end of a long menu, such as a list of countries or Internet radio stations.
6. If an error is made when navigating the menus, it is generally possible to go back to a higher level menu by pressing the Back button.

Although controls on the Internet radio are shown, all functions are also available using the remote control.

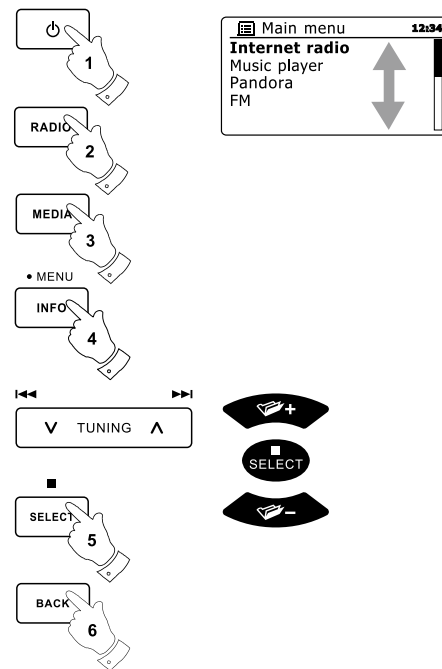

## Configuration


### Connecting your radio to your computer network

1. Place your radio on a flat surface and plug the mains lead into the mains socket located on the back of your radio ensuring that the plug is pushed fully into the socket.
2. If you wish to use a wired network connection, plug the Ethernet cable into the socket at the back of the radio.
3. Plug the other end of the mains lead into the wall socket and switch on the wall socket.


#### IMPORTANT:

The mains plug is used as the means of connecting the radio to the mains supply. The mains socket used for the radio must remain accessible during normal use. In order to disconnect the radio from the mains completely, the mains plug should be removed from the mains socket outlet completely.

4. When you apply power, the display on the radio will light up and say: 'WELCOME' and 'STARTING' with a progress indicator. The first time that you use your radio (or after Factory Reset) the display will show "Setup wizard" and "YES" will be highlighted on the screen. Press the Select button to start the setup wizard. The screen will ask if you wish to run the setup wizard again at the next start up. This will lead to the main menu.
5. Press the Tuning Up or Down buttons on the touch panel (Alternatively, the Folder Up or Down buttons on the remote control handset) to highlight the desired clock format (either 12 Or 24 hour) then press the Select button to enter your selection. A menu allowing you to specify the auto update option for the clock will appear on the display. The default of 'Update from Network' will be the best option for most users.

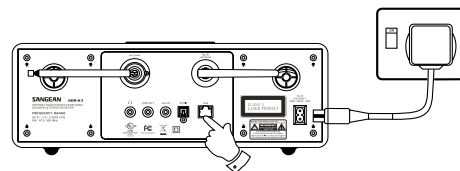

GB

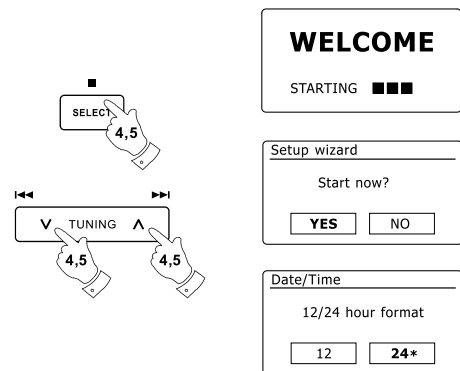

6. Press the Tuning Up or Down buttons on the touch panel (Alternatively, the Folder Up or Down buttons on the remote control handset) to choose an auto-update option for the clock. This can be updated from FM radio, from the Network, or not updated. The default is to auto update from the network. If you choose any other option, go to step 9. Otherwise you will first need to select the correct time zone and daylight savings setting, see steps 7 and 8. If you choose “No update” you will need to set the clock manually later (see the section of ‘Manually setting the clock’). Press the Select button to confirm your choice.







7. Press the Tuning Up or Down buttons on the touch panel (Folder Up or Down buttons on the remote control handset) to highlight the time zone which is applicable to your location. Press the Select button to enter the setting.

8. You will then need to set the Daylight Savings option according to your location (Daylight Savings is also known as Summer/Winter time). Press the Folder Up or Down buttons on the remote control handset to highlight “YES” to turn on daylight savings if required or ‘NO’ if you do not wish to use daylight savings then press the Select button to confirm the setting.

9. The display will then show a list of WiFi regional options for the network set up. Press the Tuning Up or Down buttons on the touch panel (Alternatively, the Folder Up or Down buttons on the remote control handset) to highlight the required region and then press the Select button to select it. Do this even if planning to use the wired Ethernet connection. Your radio will then scan for available WiFi networks. If using WiFi we recommend that the WiFi antenna is positioned vertically.

10. The radio will enter the Network Settings Wizard and will display ‘Scanning...’. After a short while the display will show a list of the available WiFi networks. If you are intending to use the WiFi connection, go to step 11.

To use the Ethernet connection to your router (with automatic configuration). Press the Folder Up or Down buttons on the remote control handset to point to the “[Wired]” menu item. Press the Select button and the radio will attempt to connect.

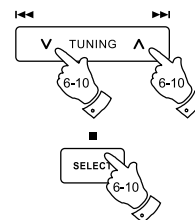

If your network allows automatic configuration (which is normal) the radio will acquire a network address. The screen should say 'Connecting...', and then 'Setup wizard completed'. Press the Select button to exit the setup wizard and show the main menu.

There are two indicator lights incorporated into the connector. If you have problems with your wired connection, they may help you to identify the possible cause of the problem.

Yellow ON = Link established; OFF = no connection


Yellow Flashing = Data transfer

Green ON = 100 Mbits/sec link; OFF = 10 Mbits/sec link

If your network does not support automatic configuration or if you wish to set it up manually then you should select '[Manual config]' instead of selecting '[Wired]' in the Network Wizard.

11. If you plan to use a WiFi connection, you will first need to identify your network in the list of network names presented by the Network Wizard. If no networks are found then you may have to get your wireless router working (please see the instructions supplied with it) or you may be too far from the router. When the radio finds your wireless network, it displays the Network Name (SSID) for the wireless access point on the screen. This is a name that is allocated to the access point in your router by the person who set up the network – for example: 'Jones family' or 'Paul's network'. If the router supports WiFi Protected Setup, then '[WPS]' will be shown in front of the SSID. It is possible, and in some locations highly likely, that your radio will find more than one wireless network, in which case you should choose which one you need to connect to.

12. Press the Folder Up or Down buttons on the remote control handset (alternatively, Tuning Up or Down buttons on the touch panel) to see the SSID for each wireless network that has been found. If your network is shown proceed to step 14 on the next page. If it is not shown then proceed to step 13. If you make a mistake at any point, use the Back button to go back to the previous screen.

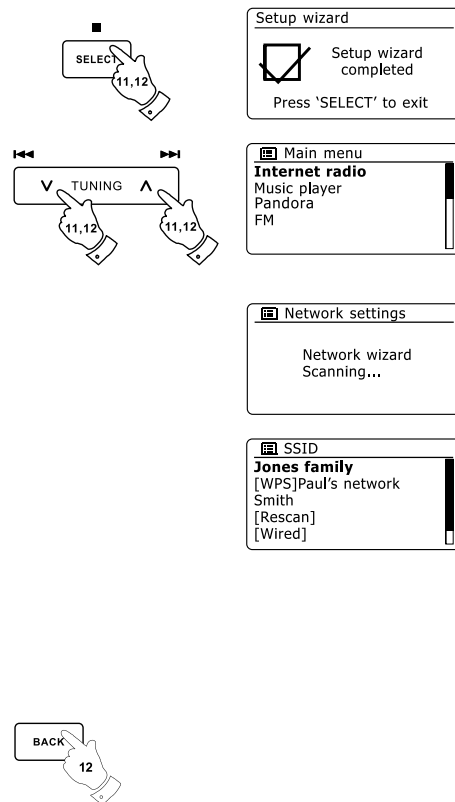


13. If your network is not found, it may be because the router is configured not to broadcast the SSID. You should then use the Folder Up or Down buttons on the remote control handset and Select buttons to highlight and select the '[Manual config]' option in order to enter the network details manually. This is described in 'Manual Network Configuration'. If your network name is being broad cast, and it was not found, then try re-scanning press the Back button), and if necessary try moving your radio to a location closer to your access point / router.

14. When the SSID for the wireless network you wish to connect to is highlighted on the screen, press the Select button. If WiFi Protected Setup (WPS) was indicated, you will see an additional menu at this point, otherwise proceed to step 15. Choose one of the WPS menu options as required for your router (WPS may be via push button, or using an identification number). 'Push Button' – the display prompts you to press the WPS button on your router and then the Select button on the radio. The two devices should then connect with the encryption key sent automatically to the radio. 'PIN' – the display shows an identification number which you must enter into your router using a web browser (refer to your router's user documentation). You should then press the Select button on the radio. 'Skip WPS' – if you wish to enter the encryption key yourself (or if it was previously Entered). If you choose Push Button or PIN the screen will then show 'Connecting...' and then 'Setup wizard completed'. Press the Select button to exit setup wizard.

15. If your network is configured without an encryption key, the screen should say 'Connecting...', and then 'Setup wizard completed'. Press the Select button to exit the setup wizard and show the main menu. If this is the case then you have successfully connected your radio to your network.

16. If the screen displays 'Key', it is because the network is using one of the encryption systems: Wired Equivalent Privacy (WEP) or WiFi Protected Access (WPA). You will need to enter the correct WEP or WPA key into the radio to allow it to communicate with your wireless network. If you do not have the WEP or WPA key, then you should obtain it from the person who set up your network. Some wireless routers may come with an encryption key already set up by the supplier, in which case you should refer to the documentation provided with it. WPA is used here to also include WPA2.

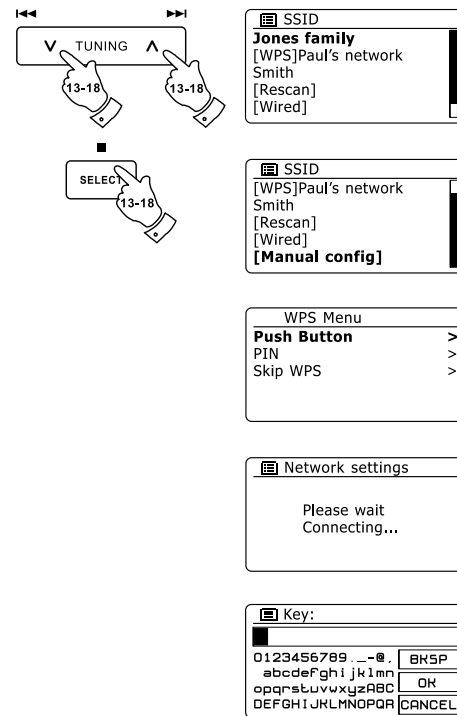

WEP keys are 10 or 26 characters long (using 0 – 9, and A – F). Some wireless Routers can also use pass-phrases for WEP but these are not supported. WPA keys are usually set up using a pass-phrase of between 8 and 63 characters. Your radio accepts pass-phrases for WPA keys.

17. To enter the WEP or WPA key, characters are selected and entered using the Menu Up or Down, Left or Right (on the remote control) and Select buttons. The highlight scrolls through the available characters as well as the three controls on the right. The character currently highlighted will be entered when you press the Select button. Do this as needed until the complete key has been entered. Remember, WEP keys only use the numbers 0-9 and letters A-F. WPA keys are sensitive to upper and lower case characters. You must enter the key exactly or the radio will not connect to the network. The three controls on the right-hand side of the screen have special functions. You can quickly access these by pressing the Info button and then use the Up or Down and Select buttons as needed:


select 'BKSP' to erase a character just entered (long press to clear)

select 'OK' when the complete key has been entered

select 'CANCEL' to cancel an re-run the Network Wizard

If a WEP or WPA key has previously been entered for the selected SSID then the display will show 'Key: [Set]'. If you have previously entered a different key, you must clear this by selecting the 'BKSP' symbol. This will remove the '[Set]' indication. After the final character of the WEP or WPA key has been entered, highlight the 'OK' symbol and press the Select button. Then screen will show 'Connecting...' and then 'Setup wizard completed'. Press the Select button to the exit setup wizard. The radio should now be able to connect to the network.

18. Once you have connected your radio to the network (and therefore also to the Internet) it will display the main menu. Press the Standby button to put the radio in Standby mode. It should then display the time as obtained from the Internet. If the time display is not correct for any reason, it can easily be adjusted later, see 'Manually setting the clock'. If you have followed the steps on the preceding pages successfully, your radio will have connected to your router, and then made a connection to the Internet and set its clock. If this is the case, then you can try listening to radio stations via the Internet.



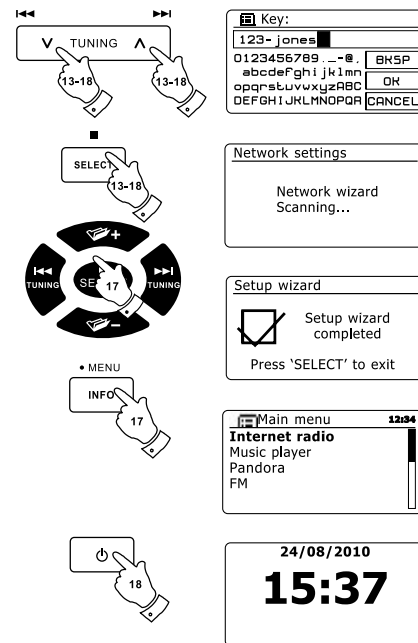


## Changing the network connection

In the sections above, you chose how your radio would be connected to your network, either using a WiFi connection or using a wired Ethernet cable. From time to time, you may find that you need to connect to different computer networks. The Internet setup menu allows you to change your radio's network settings, scan for an alternative wireless network, or to manually configure the network parameters. The steps outlined below describe how you can do this – see also the section 'Network Profiles'.



## Configuring the radio to use an alternative WiFi connection

1. From the Network settings menu select 'Network wizard'. This will present you with details of any WiFi networks that are found. Scroll down the list using the Folder Up or Down buttons on the remote control panel to the desired network name. Press the Select button to select this network. The radio will then use its WiFi system to communicate with the network. Depending on the settings for the new network you may need to enter an encryption key. By default the radio will then acquire an IP address and other network settings from your router using DHCP.

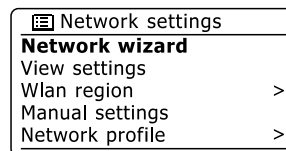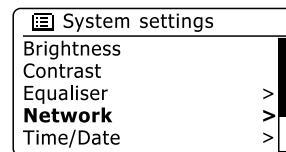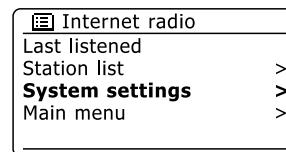

## Configuring the radio to use the wired Ethernet connection

2. Connect your radio to your router using an Ethernet cable plugged into the socket (marked LAN) at the back of the unit. From the Network settings menu select 'Network Wizard'. This will preset you the details of any WiFi networks that are found. Scroll down the list to the '[Wired]' option using the Folder Up or Down buttons on the remote control handset. Press the Select button to select this. The radio will then use its Ethernet connection to communicate with the network. By default the unit will then acquire an IP address and other network settings from your router using DHCP.

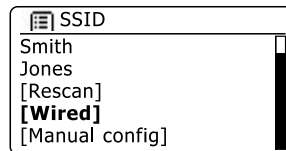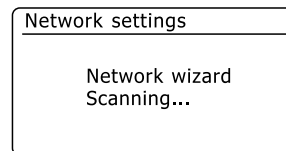



## Manual network configuration

If you do not wish to use DHCP for automatic configuration, or if your network is configured with a hidden SSID, then you will need to enter some network settings manually. (Note – a hidden SSID may prevent casual observers from detecting your network, but is not recommended as a means of network security.)

1. From the radio Network settings menu, select 'Manual settings'. You must then choose whether to connect using 'Wired' or 'Wireless' connections. If you choose 'Wireless' there are as many as nine settings screens, shown by the '1 of 9' progress marker in the top right corner of the display. If you choose 'Wired' there are five screens and the progress marker will reflect this, although the steps to set up the network parameters are basically the same.
2. The next menu asks whether you wish to use DHCP to configure your network parameters (IP address, subnet mask, gateway address, etc). Unless you are familiar with networking and related terminology, we recommend that you allow the use of DHCP. Choose 'DHCP enable' unless you need to specify the network details manually. If you have chosen 'Wired' and then 'DHCP enable', your radio should now establish a connection to the router using the Ethernet cable. Please skip to step 11. If you chose 'Wireless' and 'DHCP enable', please skip to step 6 in order to set up the wireless connection details. If you chose 'DHCP disable' for either connection method, the next step is to set up the IP address.
3. The manually specified IP address should be chosen to be compatible with the settings in your router and must be a unique address on your network. If you are using DHCP for some devices and static (manually configured) IP addresses for others, the IP address used should fall outside the range that the router may allocate using DHCP. Typically, the first three groups of digits will be the same for all devices on your network. To enter the IP address, press the Folder Up or Down buttons to set the value for each group of digits and then press the Select button or the Left or Right buttons on the remote control to enter the value and to move on to the next group. When the IP address has been entered, the subnet mask should be entered. The subnet mask defines which parts of the IP address are common across your network. For most small networks the subnet mask will be 255.255.255.0 and this is entered in the same way.
4. The Gateway address is normally the IP address of the router through which the radio connects to the internet and is entered in the same way as the previous addresses.

Network settings 1/9

Network wizard  
View settings  
Wlan region >  
**Manual settings**  
Network profile >

GB

Connection type 1/9

Wired >  
**Wireless** >

DHCP 2/9

**DHCP enable**  
DHCP disable

IP settings 3/9

IP address  
[192] . [168] . [1] . [25]  
Subnet mask  
[255] . [255] . [255] . [0]

Gateway address 4/9

Gateway address  
[192] . [168] . [1] . [1]

5. In most installations the DNS settings (DNS = Domain Name Server) will be set to the same IP address as your router. In this case the secondary DNS may be left at zero. To enter the DNS address, press the Folder Up or Down buttons on the remote control to set the value for each group of digits and then press the Select button or the Left or Right buttons (on the remote control) to enter the value and to move on to the next group. Repeat this until all eight groups of digits have been entered. If you previously specified 'Wired' and then 'DHCP disable', your radio should now connect to the router using the Ethernet cable (in which case skip to step 11).

DNS		5/9
Primary DNS		
192	168	1 1
Secondary DNS		
0	0	0 0

6. If you specified 'Wireless', the next step is to set up the WiFi connection, starting with the name of the wireless network (SSID) followed by the encryption options and password. To enter the SSID, characters are selected and entered using the Folder Up or Down, Left or Right on the remote control and Select buttons. The radio scrolls through the available characters as well as the three controls on the right. The character currently highlighted will be entered when you press the Select button. Do this as needed until the complete network name has been entered. The SSID setting is sensitive to upper and lower case characters and symbols. You must enter it exactly as set up in your router. The three controls on the right-hand side of the screen have special functions. You can quickly access these by pressing the Info button and then use the Folder Up or Down and Select buttons on the remote control as needed:

SSID		6/9
mynetwork		
0123456789 . _ - @ ,	BKSP	
abcdefghijklmnopqrstuvwxyzABC	OK	
DEFGHIJKLMNOPQR	CANCEL	

select 'BKSP' to erase a character just entered (long press to clear); Info again to continue  
 select 'OK' when the complete SSID has been entered  
 select 'CANCEL' to cancel and go back to the DNS settings screen

7. Having entered the SSID, you must enter details of the encryption system used on your wireless network. This should be the same as specified in your router settings. If your network does not use encryption, then select the 'Open' option. Your radio should then connect to the network, so skip to step 11. If your network uses WEP (Wired Equivalent Privacy) select the 'Pre-Shared Key' option then go to step 8. The remaining options are for WPA or WPA2 (WiFi Protected Access) – see step 9.

Authentication		7/9
Open		
Pre-Shared Key		
WPA		
WPA2		

8. If you chose 'Pre-Shared Key' in step 7, you should then choose the WEP option. The key should be entered using only the numbers 0-9 and the letters A-F. The key will be 10 characters long for 64-bit encryption and 26 characters long for 128-bit encryption. The radio will accept lower-case letters a-f as equivalent to upper-case A-F. Spaces or special symbols are not permitted in WEP keys.

Encryption type		8/9
Disabled		
WEP		

Key:		9/9
01234ABCDE		
0123456789 . _ - @ ,	BKSP	
abcdefghijklmnopqrstuvwxyzABC	OK	
DEFGHIJKLMNOPQR	CANCEL	

The three controls on the right-hand side of the screen have special functions. You can quickly access these by pressing the Info button and then use the MenuUp or Down and Select buttons as needed:

select ' **BACKSP** ' to erase a character just entered (long press to clear); Info again to continue

select ' **OK** ' when the complete encryption key has been entered

select ' **CANCEL** ' to cancel and go back to the SSID settings screen

Once the key is entered the radio should connect to your network. Please skip to step 11.

9. WPA and WPA2 are similar, although WPA2 offers a higher level of security. Whichever you selected in step 7, you then have to specify the variant used. They are TKIP (Temporal Key Integrity Protocol) and AES (Advanced Encryption Standard). As previously, the setting should match that used by your router. Some routers allow both to be specified, and the router will use whichever variant is supported by the connected device. AES is regarded as the more secure option if it is available.

10. The radio will then require you to enter the encryption key. This must be a string of between 8 and 63 characters and must be identical to the key which has been entered into your router. Note – the encryption key is sensitive to the use of upper and lower case letters and symbols. Take care to enter the key exactly, or the radio will not be able to connect to your router. The three controls on the right-hand side of the screen have special functions. You can quickly access these by pressing the Info button and then use the Folder Up or Down and Select buttons as needed:

select ' **BACKSP** ' to erase a character just entered (long press to clear ); Info again to continue

select ' **OK** ' when the complete encryption key has been entered

select ' **CANCEL** ' to cancel and go back to the TKIP / AES options screen

Once the key is entered the radio should connect to the network.

11. While the radio is trying to connect to the network, it will display 'Processing...' when checking the encryption key (if using the WiFi connection) and then 'Connecting...'. If the connection is made successfully, the radio will return to the Network settings menu. If the unit cannot connect, then it will display a 'Failed to connect' message and will return to the SSID entry screen (step 6). Once connected, the network settings are stored in the radio. The settings are retained when the radio is disconnected from the mains. You may now use the Back and Radio or Media buttons to access the functions of your radio.

Authentication
 7/9

Open  
 Pre-Shared Key  
 WPA  
 WPA2

Encryption type
 8/9

TKIP  
 AES

Key:
 9/9

A Key For My Network

0123456789 . \_ - @ ,  
 abcdeFghi jklmn  
 opqrstuvmxyzABC  
 DEFGHIJ KLMNOPQR

BACKSP

OK

CANCEL

Network settings

Please wait  
 Connecting...

Network settings

Network wizard  
 View settings  
 Wlan region  
**Manual settings**  
 Network profile

GB

## Internet Radio

### Internet Radio – the basics

Before you can use your radio to listen to broadcasts via the Internet, it is necessary to have connected it to your computer network using either the wireless (WiFi) connection or the wired Ethernet connection located on the back of the unit.

There are literally many thousands of radio broadcasts available via the internet as well 'Podcasts'. Your radio provides several ways of searching for broadcasts in order to make finding and choosing them easier. Once you have found radio stations which you like, you may either store them as presets within the radio, or add them to a list of your favorite stations which your radio can access. The number of presets is limited (there are ten presets on the radio), but you can store as many favorites as you like.







You may search for an internet radio station by Location. If you know the name of the station and the country from which a station is broadcast this may be the easiest method to find a station. It is also a great way to experience radio from other parts of the world. You may also search for an internet radio station by Genre. If you prefer a particular type of music, Blues for example, you may search for a radio station that broadcasts that type of music, and you can choose from a list of Blues radio stations regardless of location, or taking location into account.

If you know part of the name of an internet radio station, you can enter it into the radio and it will search for stations that match that name. This can be helpful if you are unsure of the location or genre of a particular station.

The radio connects to a radio station database which serves many users in many countries. This means that there is a very wide range of program content available. You can also search for stations which have been recently added to those available (new stations) or you can search for the most popular.

## Selecting a radio station by location



1. Press the Standby button to switch the radio on. Then press the Radio button to select the internet radio mode display.
2. Press the Tuning Up or Down buttons on the touch panel (Alternatively, Folder Up or Down buttons on the remote control handset) to enter the main Internet radio menu. Press the Tuning Up or Down buttons on the touch panel (Alternatively, Folder Up or Down buttons on the remote control handset) until 'Station list' is highlighted on the display and then press the Select button to select the option.
3. Press the Tuning Up or Down buttons on the touch panel until 'Stations' is highlighted on the display and then press the Select button. Note that the menu may offer one or more local selections based upon the country in which the unit is being used, according to your internet IP address ('United Kingdom' and 'BBC' stations, for example).
4. Press the Tuning Up or Down buttons on the touch panel until 'Location' is highlighted on the display and then press the Select button to select.
5. Press the Tuning Up or Down buttons on the touch panel to scroll through the list of continents. When the desired continent is highlighted press the Select button to enter your selection.
6. The display will show a list of countries within the chosen continent. If there are many countries shown you can scroll through the list continually in either direction. For example, if the chosen continent was Europe, then to find the United Kingdom scroll up from the top of the list to the bottom by pressing the Tuning Up button. Press the Select button to choose the desired country.
7. You will typically find that you then have the option to select either 'All Stations' or one of a number of categories. The lists are always sorted alphabetically, and long lists will wrap around from top to bottom or bottom to top.

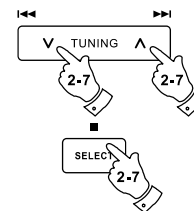

GB

## Selecting a radio station by location - cont.

8. Press the Tuning Up or Down buttons on the touch panel to highlight your chosen radio station and then press the Select button to enter your selection. The display will show 'Connecting...' while the radio connects to the new station. The station should then start playing. Adjust the volume as needed.
9. If the station has on-demand content, that is, it gives the option of listening to programs which have already been broadcast or to Podcasts, there will be an additional screen showing the radio station name as well as a 'Podcasts' option. These are selected using additional menus, determined by the radio station and the content. There may simply be a list of programs, or there may also be options to choose from broadcasts on particular dates or days of the week. The examples shown here are typical. Podcasts and Listen Again content can also be accessed separately from the main Internet Radio menu.

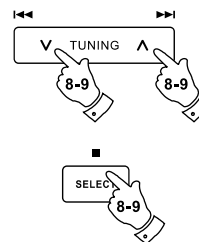

## If your radio cannot connect to a radio station

### Note:

If your radio is unable to connect to an internet radio station it will generally either display 'Network Error' or 'Stopped'. This can be for many reasons, but typically Will be due to one of the following:


- The radio station may not be broadcasting at the preset time.

- The radio station may not be able to accommodate any more connections from internet listeners.

- The broadcaster may limit listening to specific countries or regions.


- There may be network congestion (either locally or at a distance) which is affecting the reliability of the connection.

If your radio can connect, but the audio is not continuous and the radio keeps having to reconnect, this may be due to the radio station only having limited connection capacity.



## Selecting a radio station by genre


1. Press and hold the Menu button to enter the main Internet radio menu. Press the Tuning Up or Down buttons on the touch panel (Alternatively, the Folder Up or Down buttons on the remote control handset) until 'Station list' is highlighted on the display and then press the Select button.
2. Press the Tuning Up or Down buttons on the touch panel (Alternatively, the Folder Up or Down buttons on the remote control handset) until 'Stations' is highlighted on the display and then press the Select button.
3. Press the Tuning Up or Down buttons on the touch panel (Alternatively, Folder Up or Down buttons on the remote control panel) until 'Genre' is highlighted on the display and then press the Select button.
4. Press the Tuning Up or Down buttons on the touch panel (Alternatively, the Folder Up or Down buttons on the remote control handset) to scroll through the list of content types. This menu is normally cyclic – you can scroll the list continually in either direction. When the chosen genre is highlighted, press the Select button.
5. You then have the choice of 'All Stations' of the chosen genre, or a list of countries. Note if a country is not shown then the station may still appear in the 'All Stations' list. Press the Tuning Up or Down buttons on the touch panel (Or Folder Up or Down buttons on the remote control) and the Select button to choose as needed.
6. A list of radio stations is then shown. Press the Tuning Up or Down buttons on the touch panel (Or Folder Up or Down buttons on the remote control) until the desired station name is highlighted on the display.
7. Press the Select button to select the station. The display will show 'Connecting...' while it finds the new station. If the radio is unable to connect this may be for one of the reasons explained.
8. Adjust the Volume as needed to set the listening level.

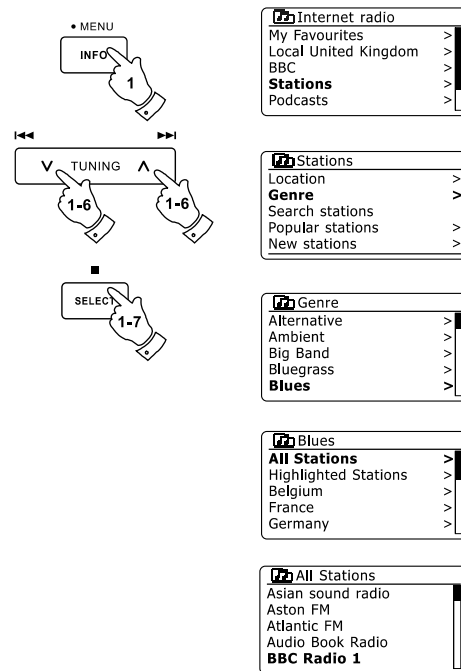

## Searching for a radio station by name

There may be occasions when you know the name of a radio station but you do not know the location or genre. This facility allows you to search for the station using a part (or parts) of the radio station name.

1. Press and hold the Menu button to enter the main Internet radio menu. Press the Tuning Up or Down buttons on the touch panel until 'Station list' is highlighted on the display and then press the Select button.
2. Press the Tuning Up or Down buttons on the touch panel until 'Stations' is highlighted on the display and then press the Select button.
3. Press the Tuning Up or Down buttons on the touch panel until 'Search stations' is highlighted on the display and then press the Select button.
4. To enter the search word(s) press the Folder Up or Down, Left or Right buttons on the remote control to highlight each character for the search in turn, and press the select button to enter. If you make an error press the Info button to access the delete character ' [BKSP] ' on the screen and the character selection. After the final character of the search has been entered, use the Info button and then the Folder Up or Down buttons on the remote control handset to highlight the ' [OK] ' symbol on the screen and then press the Select button to finish.
5. The radio will search for radio stations that match your search data. If you include a space between two search items the radio will look for station names which include both items. Thus a search for 'ROCK 100' could find a station called '100 Classic Rock Hits' as well as a station called '100.FM Rocks'
6. Press the Folder Up or Down buttons on the remote control handset to highlight the station that you wish to listen to and press the Select button to confirm your choice. The display will show 'Connecting...' while it finds a new station.



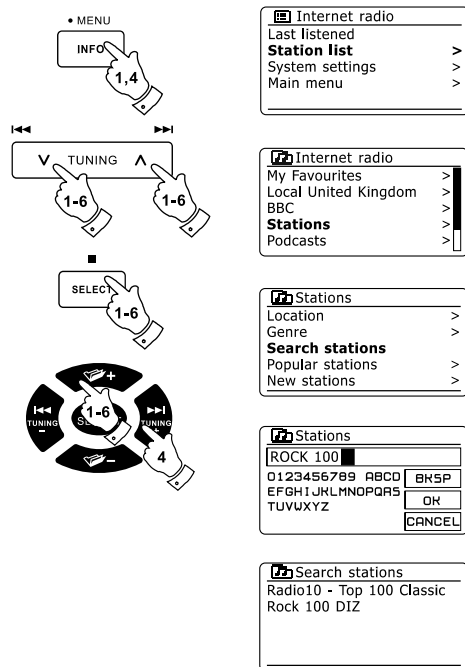




## Selecting a new or popular station

As described in the section 'Internet Radio – the basics', your radio connects via the the Internet to a database of radio stations. This option is provided to highlight stations which are newly added to the list of those available, or stations which are particularly popular with listeners around the world. Your radio allows you to easily choose stations from these two categories, using menus very similar to those used when finding stations by location and genre.





1. Press and hold the Menu button to enter the main Internet radio menu. Press the Tuning Up or Down buttons on the touch panel (Or Folder Up or Down buttons on the remote control) until 'Station list' is highlighted on the display and then press the Select button.
2. Press the Tuning Up or Down buttons on the touch panel (or Folder Up or Down buttons on the remote control) until 'Stations' is highlighted on the display and then press the Select button.
3. Press the Tuning Up or Down buttons on the touch panel (or Folder Up or Down on the remote control) until 'Popular stations' or 'New stations' is highlighted on the display. Press the Select button to enter your choice.
4. Press the Tuning Up or Down buttons on the touch panel (or Folder Up or Down buttons on the remote control) to highlight the station that you wish to listen to and then press the Select button to enter your choice. The display will show 'Connecting...' while the new station is found.

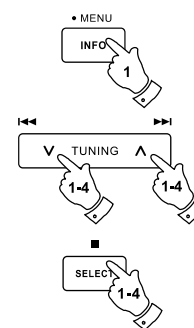

## Selecting a podcast / BBC Listen Again

Some radio stations allow you to listen to programs that have already been broadcast. The BBC's Listen Again service is an example of this. In addition, radio broadcasters and individuals may make programs which are intended normally to be downloaded into a computer or copied onto a portable media player. These are commonly known as Podcasts. On your radio, both Listen Again programs and Podcasts are grouped together as Podcasts, and the same menu is used to access and listen to both types of programming. Listen Again programs are also accessible via the Stations menu.

1. Press and hold the Menu button to enter the main Internet radio menu. Press the Tuning Up or Down buttons on the touch panel (or the Folder Up or Down buttons on the remote control) until 'Station list' is highlighted on the display and then press the Select button.
2. Press the Tuning Up or Down buttons on the touch panel (or Folder Up or Down buttons on the remote control) until 'Podcasts' is highlighted on the display and press the Select button.
3. You may then search by location, genre, or using part of the name of the podcast. The searches operate in exactly the same way as when searching for a conventional radio station. Searching by location is done first by continent, then by country. You may then list 'All shows' or search within a country by genre. Searching by genre is more direct, since once the genre is chosen the next menu display shows a list of available podcasts. Searching by name operates in the same way as when searching for a named radio station, selecting the '[OK]' symbol when you have entered the text. You may enter one or more pieces of text which will be used for the search.
4. Press the Tuning Up or Down buttons on the touch panel (or the Folder Up or Down buttons on remote control) and then press the Select button to confirm your chosen podcast. The display will show 'Connecting...' while it finds the new program.

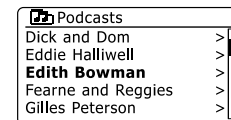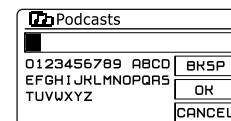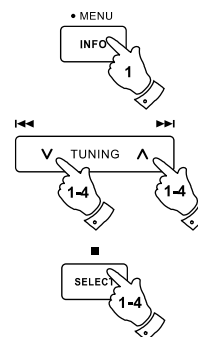


## Presetting stations

With so many Internet radio stations available, it is desirable to have a means of rapidly selecting the stations that you listen to most frequently. Your radio has ten memory presets which can easily be set to store the details of any Internet radio station. The radio station presets are retained in memory even when the radio is switched off. Please see also the section 'Last Listened' and 'Configuring My Favorite Stations'.



### Storing a preset

1. Press the Standby button to switch on your radio. Tune to the required station using one of the methods described on the preceding pages.
2. To store the currently playing radio station as a preset, press and hold the required Preset button (1 – 10) on the remote control until the display shows 'Preset stored'. The station will be stored using the chosen preset button. Repeat this procedure as needed for the remaining presets.
3. Stations which are already stored in the presets may be over-written by following the above procedure.



### Recalling a preset





1. Press the Standby button to switch on your radio. Select the Internet radio mode using the Radio button.
2. Momentarily press the required Preset button on the remote control. Your radio will then connect to the station stored in preset memory. The preset used will be shown at the bottom of the display screen.



## Last Listened

It is often helpful to be able to go back to a station that you have already listened to. Your radio has a 'Last Listened' feature which provides you with quick access to the ten most recently listened to radio stations or podcasts. As each new radio station is listened to the oldest item is deleted from the list. The Last Listened list is stored when the radio is disconnected from the mains.



1. With the radio switched on and in Internet radio mode, press and hold the Menu button. The first item on the menu is 'Last listened'. With this item highlighted press the Select button.
2. The display will then show a list of the last ten Internet radio stations or podcasts. Press the Tuning Up or Down buttons on the touch panel to highlight whichever you wish to listen to and then press the Select button to cause your radio to reconnect to that radio station or podcast.

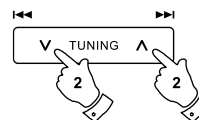

## Display modes

Your radio has a range of display options when in Internet Radio mode. Note that not all information may be available for all Internet radio stations

1. Press and release the Info button to cycle through the different options.
  - a. Description Displays information about the radio station or scrolling text messages such as artist/track name, phone number etc.
  - b. Genre Displays program type information e.g. Pop, Classic, News, etc. and the location of the current radio station







- c. Reliability                      Displays the reliability of the data stream from the station currently being received.
- d. Format                            Displays the bit rate and format of the station being received.
- e. Playback buffer                Displays status when connecting to and playing a radio station. This indicates the reliability of the data stream to your radio. If there are no bars shown to the right of the dividing line then the data stream reliability may be poor and you may find that there are many breaks in the audio (this is not always the case for REAL audio streams).
- f. Format                            Displays the current date.

Additional or alternative information may be displayed when listening to Podcasts, Categories displayable can include...

Episode name	Show description
Show genre	Show language
Episode URL	Bit rate
Codec	Sampling rate

Whenever the radio is displaying an information screen (as opposed to a menu screen), the time is displayed in the top-right corner of the display, and a WiFi strength or Ethernet connection indicator is shown in the bottom-right corner.

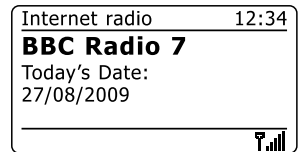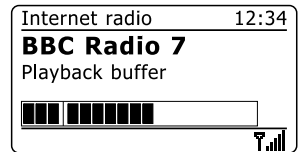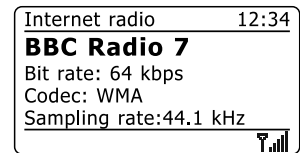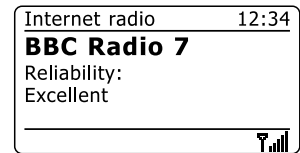





GB

## Customizing your radio

In addition to storing your favourite radio stations in the radio presets, your radio allows you to create customised lists of stations which can appear in two special menus on the radio called 'My Favourites' and 'My Added Stations'. Your radio uses a database which is accessed via the Internet in order to find out which radio stations are available and how it should connect to them. You are able to add your personal selections to this database. These will only be accessible by you using your PC or your radio. You can choose the stations which will appear in the 'My Favourites' menu from the large selection already listed. Additionally, if you find a radio station that is not listed then you may also add the Internet address (URL) of the station's audio stream to your selection. It will then appear on your radio via the 'My Added Stations' menu item.

## Registering an account

1. Open the web site <http://www.wifiradio-frontier.com> using the Internet browser on your computer. Click on the 'Register here' link and follow the on-screen instructions to register an account. During the registration process the web site asks for an access code. This allows it to uniquely identify your internet radio from the many others that it also provides data for. To obtain the access code, please follow these steps.
2. With your radio switched on and in Internet radio mode, press and hold the Menu button, then select 'Station list' using the Folder Up or Down buttons on the remote control and Select buttons.
3. Scroll down the Station list menu to the item called 'Help'. Press the Select button to enter the Help menu.
4. In the Help menu, select the menu item 'Get access code.' Provided that the radio is connected to the Internet, a code will be displayed of typically seven characters (Upper case letters and numbers). Make a note of this code for the next step. If you need to re-register late you must repeat this process to get a fresh access code.
5. You should then use the code displayed by the radio to fill in the Access Code field on the web page when you set up your account. Once you have your account set up, if you have other radios which use the same data base, you may also add them to your account. You will need to get an access code from each radio in order to add it to the account. They may then share your favorite and added radio station details.



## Customizing your radio - cont.

### Configuring My Favorite Stations


1. Using the website at <http://www.wifiradio-frontier.com> it is possible to search among the many radio stations that are available by location, genre, or language. You may also choose from new or popular stations.
2. When the radio stations that you have found are shown on your computer screen, they are shown with a 'Play' icon and an 'Add to favourites' icon (the plus symbol and heart). Clicking on the 'Play' icon will allow you to hear the radio station via your computer. Clicking on the 'Add to favourites' icon will cause the radio station to be added to the list accessible via your radio.
3. To help you organise your favourites, and since you may have a many after a while, the website will allow you to specify the name for a category or group under which the radio station will be listed on your radio. Suitable names might be 'Rock', 'Smooth', 'Mum's stations', and so on. Whenever you add another radio station to your favourites you can either add it to an existing category or create a new one.
4. Once you have Internet radio stations available in your 'My Favorite Stations' list, you may play these stations from your radio. These stations will be available on your radio from the Internet radio menu item 'My Favourites'.
5. To look at , modify or delete your favourite stations lists on the website, use the link 'My favourites' in the 'My account' area. To delete a favourite radio station, click on the icon with a heart and minus symbol.

### Configuring My Added Stations

1. If you wish to listen to a radio which is not a currently held in the database at <http://www.wifiradio-frontier.com>, it is possible to add the details yourself. You will need to obtain the internet address (URL) for the audio system for the station that you wish to add. This may be information provided by the radio station itself, via its website, or perhaps passed to you from another listener.
2. Us the 'My added stations' link in the 'My account' area on the website. This allows you to add details of new stations or to modify those already added. You can provide a name for the radio station which will be shown on your radio. You must also provide the web address, location and format details.
3. Once you have Internet radio stations available in your 'My Added Stations' list, you may play these stations from your radio. These will be available on your radio from the Internet radio menu item called 'My added Stations.'
4. It is possible to add the web addresses for audio streams which may not be playable by your radio. If you attempt to play such a stream, your radio will normally display an error message of some kind. The Sangean can only play MP3, WMA, AAC and Real Audio internet radio streams.
5. To look at, modify or delete your added stations list on the website, use the link 'My added stations' in the 'My account' area. To delete an added radio station, click on the icon with a heart and minus symbol.

## Selecting your favorite stations

1. Press and hold the Menu button to enter the main Internet radio menu.
2. Press the Tuning Up or Down buttons on the touch panel until 'Station list' is highlighted on the display. Press the Select button to enter the menu.
3. Press the Tuning Up or Down buttons on the touch panel until 'My Favourites' is highlighted on the display. Press the Select button and your favorite stations list will appear on the display (set up as described on the preceding page).
4. Press the Tuning Up or Down buttons on the touch panel to highlight the required station and then press the Select button to confirm your selection. The display will show 'Connecting...' while it finds the new station. If the station has on-demand content (that is, it gives the option of listening to programs which have already been broadcast), 'Selecting a podcast / BBC Listen again'. Should you be unable to connect to a particular station, please note that some radio stations do not broadcast 24 hours per day, and some stations are not always on-line.

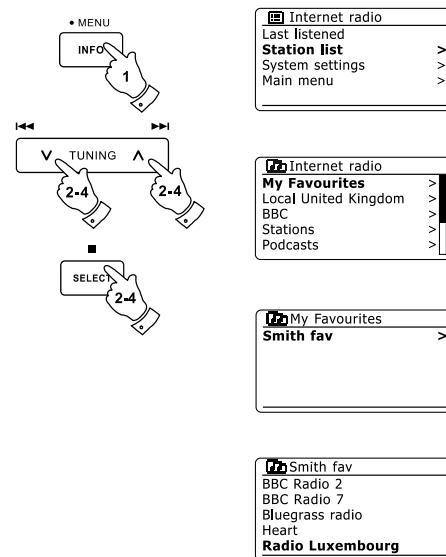




## Selecting your added stations

1. Press and hold the Menu button to enter the main Internet radio menu. Press the Tuning Up or Down buttons on the touch panel until 'Station list' is highlighted on the display and then press the Select button.
2. Press the Tuning Up or Down buttons on the touch panel until 'My Added Stations' is highlighted on the display and then press the Select button.
3. Press the Tuning Up or Down buttons on the touch panel to highlight the required station and then press the Select button to confirm your selection. The display will show 'Connecting...' while it finds the new station.

Should you be unable to connect to a particular station, please note that some radio stations do not broadcast 24 hours per day, and some stations are not always on-line.

In addition, as mentioned in the previous section, it is possible to specify audio streams for 'My added stations' which are not compatible with your radio. In this event the station will not be playable. The Sangean DDR-63 can only play MP3, WMA, AAC and Real Audio internet radio streams.

Note that the audio coding formats listed are generic terms. There are many variations of each format, as well a variety of streaming protocols in use by different radio broadcasters. Your radio has been designed to play the vast majority of coding and streaming formats in current use by broadcasters.

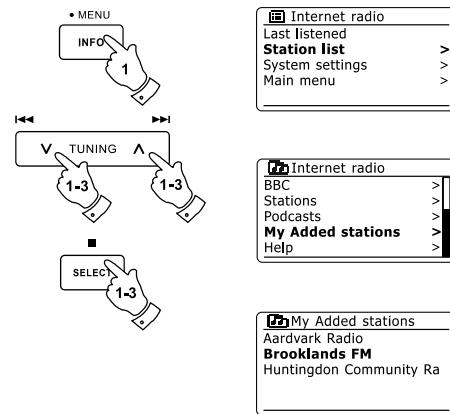

## Music player

### Use with Windows, Apple Mac and Linux

The Music Player allows you to play audio files which are stored on computer in your network.

In order to play files from a computer on your network, your radio must connect to a file server application which uses the Universal Plug and Play (UPnP) protocol. If your computer uses Windows 7, Vista or XP, then it is likely that your computer already has a UPnP server application available. Windows Media Player (versions 11 and 12) has this capability, and it is able to make your files available to your radio. It also allows you to select files by Album, Artist, and so on.

Windows Media Player 12 can serve MP3, WMA, AAC and WAV files to your radio. Windows Media Player 11 is only able to serve MP3 and WMA files to your radio. If you have your radio files stored in the FLAC format, or if you are an Apple Mac or Linux user, there are other UPnP server applications which you may use with your radio.

The Music Player on the radio can playback audio files in MP3, WMA, AAC, FLAC and WAV formats. WMA Lossless files can also be played when using Windows Media Player as it will convert these to a compatible format before streaming them to the radio. Note that the playback of files encoded using WMA Voice, WMA 10 Professional, and for files which have DRM protection are not supported.

When using a UPnP server, the search and selection criteria are determined by the server software, but typically include Artist, Album and Genre. Many server applications also allow you to access your files according to the folders within which they are stored as well as other criteria.

Windows Media Player is less flexible than some other UPnP servers, but is generally easier to set up. It is supplied as a standard component of windows 7, Vista or XP.

Many UPnP server applications are also capable of sharing pictures and video files to other network connected devices. If this is the case (as it is with Windows Media Player 11 and 12) you may see the option of choosing between 'Music', 'Video' and 'Pictures' on the Music Player's Menu. You should only select the 'Music' option. Content offered via the alternative options will not be playable on your radio.

Some third part server application allow customization of the search criteria and indexing methods. This can be useful if you have a very large collection of store music files.

Here is a short selection of alternative UPnP server applications, although many other are available.

Twonky Media Server (Windows, Apple Mac, Linux)  
TVersity (Windows)  
Elgato EyeConnect (for Apple Mac OS X)  
Media Tomb (Linux, MAC OS X)

Please refer to the documentation for your chosen server application for full details of its configuration and usage.


## Accessing your audio files via a UPnP server

If your computer is running Windows 7, then Windows Media Player version 12 includes a UPnP server which will make your files available to your radio.

If you have Windows Vista or XP (Please refer to the section of 'Accessing your audio files via a UPnP server using Windows Vista and XP'). There are other UPnP server solutions available for non-Windows users and for Windows users who may wish to use an alternative (see the preceding section). It is beyond the scope of this instruction book to cover all possible options for UPnP. We explain the use of Microsoft's Windows Media Player here since that will be the first choice for the majority of users.

### Set up UPnP access with Windows Media Player 12

1. Windows Media Player 12 (referred to here as WMP 12) can create a library from all the media files available on your PC. To add new media files to the library, select 'Library', then 'Music', then 'All music' or 'Artist', 'Album' etc. This will show you the current library contents. You may then simply drag and drop files from other locations into the library. Alternatively, with media files or folders on the screen, you may right-click on the file or folder and select 'Include in library' and then select 'Music'. In this way you can quickly add additional content to your music library.
2. In WMP 12, click on 'Stream' (see picture at right) and then select 'Automatically allow devices to play my media'. Then accept the 'Automatically allow all computer and media devices' option. There are other options (see overleaf) but this is the simplest if you just wish to quickly enable media streaming to your radio.
3. Press the Standby button to switch the unit on. Then press the Media button as needed until the Music Player mode display is shown. The main 'Music Player' menu will then be displayed.




## Set up UPnP access on a Windows PC - cont.

4. Press the Tuning Up or Down buttons on the touch panel until 'Shared media' is highlighted and press the Select button to select. The radio will scan for all available UPnP servers. It may take a few seconds for the radio to complete its scan. The radio will display '<Empty>' if no UPnP servers are found.
5. After scanning, select your UPnP server using the Tuning Up or Down and Select buttons on the touch panel. If you allowed automatic connection previously, your radio should now connect and you may skip to the next page. If you did not permit automatic connections, your radio will then normally display 'Unauthorized' at this stage.
6. Your PC may prompt you that there has been a connection to your UPnP server. Whether prompted or not, in order that the radio may access the music files, you will need to click the 'Library' tab in WMP 12 and select the 'Stream...' item to open the 'Media Streaming' window. Select 'Automatically allow devices to play my media' then select 'Automatically allow all computer and media devices'. Alternatively select 'More Streaming options' to enable sharing on a 'per device' basis.
7. In the 'More streaming options' window, the radio will be listed as a blocked device. Click on the button shown to select 'Allowed'.


### Note:

If you are using Microsoft Windows' firewall software, this should be correctly configured by WMP 12. If you are using third party firewall software you may need to manually configure it to allow your unit and WMP 12 to communicate.

8. On the radio, select the named server again using the Tuning Up or Down and Select buttons. If WMP 12 is now able to communicate with your radio you will be presented with some media selection options on the display.

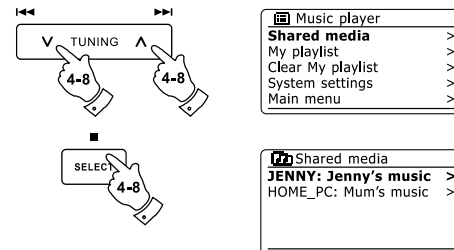

Allowing a device to connect to Windows Media Player 12





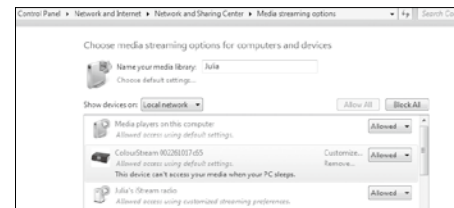


## Locating and playing media files using UPnP

Once the UPnP server has been configured to share media files with your radio, you may select the files that you wish to play as follows:-

1. Press the Standby button to switch on the unit. Press the Media button as needed until the Music Player mode display is shown. The main Music Player menu will then be displayed.
2. Press the Tuning Up or Down buttons on the touch panel until 'Shared media' is highlighted on the display and then press the Select button to cause the radio to scan for UPnP servers. Note that it may take a few seconds for the radio to complete its scan. The display will return to the Music Player menu if no UPnP servers are found.
3. After a successful scan, press the Tuning Up or Down buttons on the touch panel to highlight your UPnP server and then press the Select button. If the display shows multiple media types, select 'Music'. (Some UPnP servers can serve pictures and video content to suitable devices.)
4. The radio will now list the media categories which are made available by the UPnP server - for example, 'Album', 'Artist' and 'Genre'. Press the Tuning Up or Down buttons on the touch panel to highlight which category you wish to browse, then press the Select button to confirm your choice. If you wish to use the search function press the Tuning Up or Down buttons (on the touch panel) until 'Search' is selected on the display. You may select characters to build a keyword for searching for content to play.

When you first set up sharing with a UPnP server, not all of your files will be available immediately. The UPnP server must look inside each file to identify the artist and album information from 'tags' embedded in them. The server may also need time to access the Internet to obtain additional information such as 'album art' which it can display when you examine your music library on your PC. For a library of many files this can take some time.

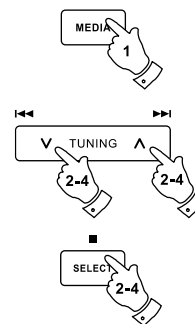

GB






## Media selection

When searching via UPnP you will have a selection of search criteria as determined by the UPnP server software on your computer. This allows you to search by a given information type (Album, Artist, Genre, etc.) and then to narrow the search to an album or to a particular track within an album.

Some UPnP server applications allow the search options to be customized. The searches described here are just examples of the possibilities.

## Listening to a complete album

1. Use the Tuning Up or Down buttons to choose content by Artist, Album, Genre, etc. according to your needs then press the Select button to enter your choice.
2. When you reach the album or folder the menu will then switch to showing the tracks in that album or folder. When searching by UPnP they will normally be listed in track number order (but as with the search criteria, this can vary according to the server application used).
3. With the first track in the album indicated, press the Select button. The album will then begin playing. While the radio is playing from your media library, you may use the menus as described above to choose a different selection. When you select the track from which to play, the radio will then immediately begin playing the new selection.




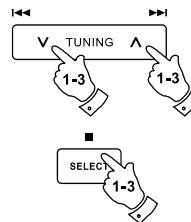


## Listening to a particular track

1. If you wish to play only a particular track from an album or folder, first choose the album or folder as described on the preceding pages.
2. Press the Tuning Up or Down buttons until the required track is highlighted.
3. Press and release the Select button. The track will begin playing. The radio will then play subsequent tracks from the same album or folder.

## Controlling playback


1. Press the Play/Pause button to pause playback of the current track.
2. If you press the Play/Pause button, playback will resume from the point where it was paused.
3. Press the Rewind/Tuning Down button to start playback of the previous track in the list.
4. Press the Fast-forward/Tuning Up button to start playback of the next track in the list.
5. Press and hold the Fast-forward/Tuning Up or Rewind/Tuning Down button to move through the current track. The longer the button is pressed, the greater the speed at which the player will move through the track. Release the button when the desired point is reached. (Note that this feature is not supported when playing files encoded using the FLAC format.)



## Controlling playback cont.

### Repeat tracks

1. When playing a track activate the repeat option by pressing the Repeat button. Your selected tracks will be played repeatedly and the repeat indicator will show on the display.
2. To turn off the repeat option press the Repeat button again.



### Shuffle tracks

1. When playing a track activate the shuffle option by pressing the Random button. Your selected tracks will be shuffled and the shuffle indicator will show on the display.
2. To turn off shuffle press the Random button again.



If both Repeat and Shuffle playback options are activated then both Repeat and Shuffle icons will be shown in the display.


### Note:

The shuffle play function may only be used if the current selection comprises fewer than 512 tracks.




# Display modes

Your radio has a range of display options when in Music Player mode. Note that the availability of information depends on the specific media files, their format and upon the server capability. (Not all UPnP servers make information from the media files available in the same way.)



1. Press the Info button to cycle through the different options.
  - a. Progress bar Displays the playback progress for the track currently playing.
  - b. Artist Displays the artist information for the track currently playing.
  - c. Album Displays the album information for the track currently playing.
  - d. Format Displays the bit rate and format of the track currently playing.
  - e. Buffer Displays the radios internal buffer status during media playback.

Whenever the Music Player is displaying an information screen (as opposed to a menu screen), the time is displayed in the top-right corner of the display, and a WiFi strength or Ethernet connection indicator is shown in the bottom-right corner together with an indicator showing the radio is obtaining the media from a UPnP server.

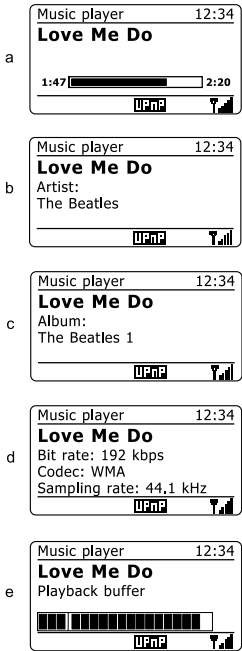

GB

## Playlists

Sometimes you may wish to set up a list of music tracks or albums which can then be played without further action - as background music for a party, for example. Your radio can be configured to hold a queue of up to 500 tracks in a playlist menu. The tracks or albums for the playlist can be selected from your UPnP server. The playlist is held in memory in your radio until external power is removed, or until the playlist is cleared from the menu.

### Adding a single track to your playlist

1. When selecting (or when playing) a track using a UPnP server press and hold the Select button and the display will show 'Added to My playlist'.
2. The track will be added to the playlist for playback later.




### Adding an entire album or folder

3. When using a UPnP server highlight the chosen album, artist or folder and press and hold the Select button. The display will show 'Added to My playlist'.
4. Each of the tracks within the album, artist or folder selection will be added to the playlist individually. This allows any unwanted tracks to be removed from the playlist if needed (see the following sections).




## Viewing your playlist

1. Press the Standby button to switch on the unit. Press the Media button as needed until the Music Player mode display is shown. The Music Player menu will then be shown on the display.
2. Press the Folder Up or Down buttons (on the remote control) until 'My Playlist' is highlighted on the display. Press the Select button to enter the playlist.
3. Press the Folder Up or Down buttons to scroll through the playlist. Tracks which are served via UPnP will show their track name.

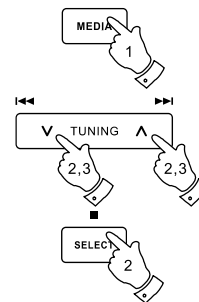



## Erasing a track from the playlist

1. Press and hold the Menu button to enter the main Music Player menu.
2. Press the Folder Up or Down buttons (on the remote control) until 'My Playlist' is highlighted on the display. Press the Select button to enter the playlist.
3. Press the Folder Up or Down buttons until the track you wish to erase is highlighted. Press and hold the Select button (on the remote control).
4. You will be asked to confirm the deletion. To delete the track press the Folder Up or Down buttons until 'YES' is highlighted on the display. Press the Select button to cause the track to be deleted.
5. If you do not wish to delete the track highlight 'NO' and press the Select button to cancel the operation.

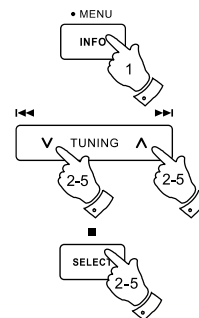



## Clearing the playlist

1. Press and hold the Menu button to enter the main Music Player menu.
2. To clear the whole playlist press the Folder Up or Down buttons (on the remote control) until 'Clear My playlist' is highlighted on the display. Press the Select button.
3. To clear the whole playlist press the Folder Up or Down buttons until 'YES' is highlighted on the display. Press the Select button to cause the playlist to be cleared.
4. If you do not wish to clear the playlist highlight 'NO' and press the Select button to confirm.

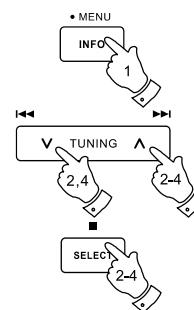

## Playing your playlists

1. Press and hold the Menu button to enter the main Music Player menu.
2. Press the Folder Up or Down buttons (on the remote control) until 'My playlist' is highlighted on the display. Press the Select button.
3. To play the playlist from a particular track, press the Folder Up or Down buttons until the desired track is highlighted then press the Select button to start play.
4. While playing from the playlist, you can use this function to jump to a particular track within the playlist. While playing from the playlist, you may add additional tracks or albums or remove specific tracks (please see the preceding sections).

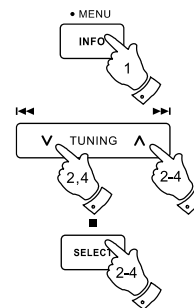

## Pandora

### Pandora-the basics

Pandora is an automated music recommendation and Internet radio service created by the Music Genome Project. It has millions of tracks available which you can access using your radio, your computer and other devices. Users enter a song or artist that they enjoy, and the service responds by playing selections that are musically similar. This can introduce you to a new range of artists and tracks which you will probably enjoy but which you may never have heard before.

Before you can use Pandora with your radio, you will need to have created an account at Pandora web site. You can then start to listen to radio stations initially based on particular artists or tags/genres. Pandora is available on various platforms and computer media players. Any personalization that you make to your account from one platform are reflected on the others.

### Love / Ban features

Each track played can be responded to with favorable (thumbs up) or unfavorable (thumbs down) buttons, which determine if it should be played, and how much similarly classified songs should be played in the station. A second negative response to the same artist will ban that artist from the selected station, unless the user has marked the artist positively on another occasion. No response is applicable to musical attributes or to albums. An unfavorable response immediately stops play of the track.

### User accounts

In order to use the Pandora service with your radio, you must either create a Pandora account or already have one set up. This account keeps track of your musical preferences and listening choices and is what makes the music offered by Pandora personal to you. Setting up an account is simple and is done via the Pandora web site.

The radio allows more than one set of Pandora account details to be entered. If the unit is used by more than one person, it is possible to choose which account is used when listening to Pandora.



The features of the Pandora service are only available on the radio with a subscription to Pandora. This may differ from the range of features available when accessing the Pandora service from a computer or any other device. The provision of the Pandora service and the features offered with and without subscription are subject to terms and conditions set out on the Pandora web site.

**Note:** For any detail features of Pandora, please go to the Help section at [www.pandora.com](http://www.pandora.com)

### Set up a Pandora user account




Before you can use the Pandora feature, you should sign-up and create an account on the web site <http://www.pandora.com> using the internet browser on your computer. Be sure to make a note of the user name and password.

1. Press the On/Standby button to switch on your radio. Press the Radio button as needed until the Pandora mode display is shown.
3. Press the Folder Up or Down buttons (on the remote control) until 'Pandora setup' is highlighted on the display. Press the Select button to enter the setup menu.
4. Press the Folder Up or Down buttons until 'User Accounts' is highlighted. Press the Select button and then select '<Add new account>'. You will land on registration screen.
5. Follow on screen instruction to complete the registration by entering activation code at <http://www.pandora.com/frontier>
6. When the registration is completed. The Pandora web page will show 'All done.' You can now find your registered account has been synced to your DDR-63.



## PANDORA<sup>\*</sup>



### internet radio

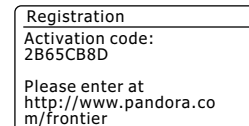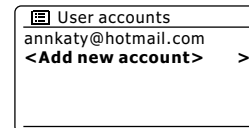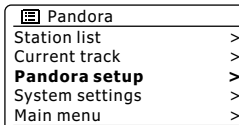

## Selecting an account




If you have more than one Pandora account set up in your radio, you may easily switch between them.

1. Press the Radio button until the Pandora mode display is shown.
2. Press the Folder Up or Down button to enter the 'Pandora setup' menu followed by the 'User Accounts' menu. The display will show those accounts whose details are stored in the radio. The account which is currently in use will be marked with an asterisk.
3. Press the Folder Up or Down buttons to highlight the account that you wish to switch to. Then briefly press the Select button to immediately select the alternative account.
4. The display will then show the Pandora list. Choosing an option will then play tracks according to the selected account's preference.

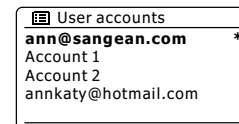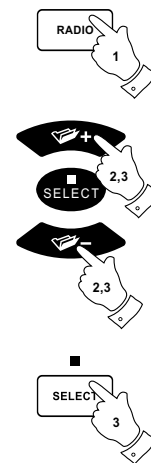

### Deleting an account

1. Press the Folder Up or Down buttons to highlight the account you wish to delete.
2. Press and hold the Select button until the account delete screen is shown.
3. Press Folder Up or Down button to highlight 'YES' option. Press Select button to complete the account deletion.


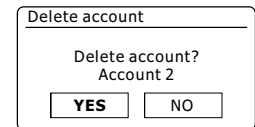
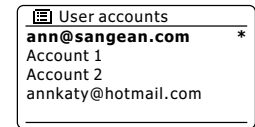
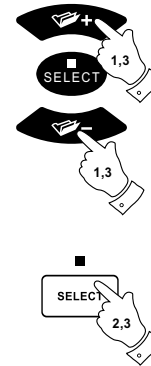




## Delete/ rename a station

You can choose to delete/ rename any station in your Pandora account.


1. Press the Radio button as needed to select Pandora mode.
2. Press and hold the Menu button to enter the main Pandora menu. Press the Folder Up or Down buttons until 'station list' is highlighted on the display. Press the Select button, all the station listed in your account is shown.
3. Press the Folder Up or Down button to highlight the station you want to delete/ rename.
4. Press and hold the Select button until the station management screen is shown.
5. Highlight the options of rename or delete the selected station by using Folder Up or Down button. Press the Selection button to complete your desired operation.

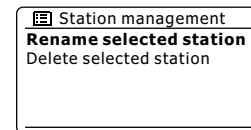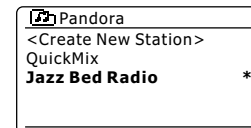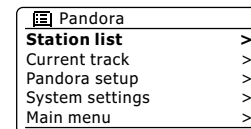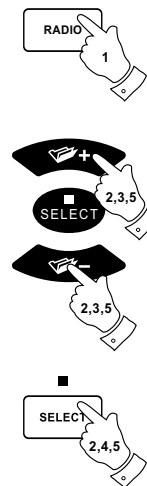

GB

### Create a new station

1. Press the Radio button as needed to select Pandora mode.
2. Press and hold the Menu button to enter the main Pandora menu. Press the Folder Up or Down buttons until 'station list' is highlighted on the display. Press the Select button to enter the Station list menu.
3. Enter either an artist name or name of a song to search for desired station.
4. A list of station is shown. Press the Select button to confirm your choice.


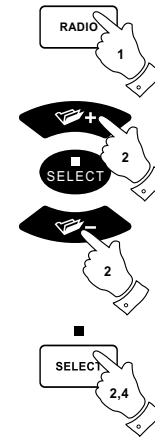


Enter Artist/song name	
ROCK 100	
0123456789 ABCD	BACK
EFGHIJKLMNOPQRS	OK
TUVWXYZ	CANCEL

## Current playing track management

**Note:** This feature will only appear in the menu screen when a track is playing

1. Press and hold the Menu button to enter the main Pandora menu. Press the Folder Up or Down buttons until 'Current track ' is highlighted on the display. Press the Select button to get into Current track menu.
2. In the menu, three options are available:
  - '**Don't play this song for a month**': lets you put a good song on the shelf for a while when you have heard it one time too many.
  - '**Why this song?**': provides information related to the current playing track.
  - '**Bookmark**': useful for remembering a song or an artist so you can learn more, or make a purchase at a later time.
3. Press the Select button to complete your desired operation.

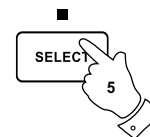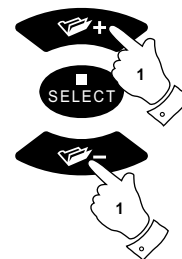


GB

## FM Radio


### Operating your radio in FM mode

1. Carefully extend the telescopic aerial and press the Standby button to switch on your radio.
2. Press the Radio button as needed to select FM radio mode.
3. Press the Tuning Up button (on the radio) or the Tuning Up button (on the remote control) and then the Auto button on the remote control. The displayed frequency will increase. Your radio will scan up the FM band from the currently displayed frequency and will stop scanning when it finds a station of sufficient strength.
4. The display will show the frequency of the signal which has been found. If RDS information is available, after a few seconds the display will show the radio station name. If you only hear hiss or interference, simply press the Auto button to scan further. Your radio may have found a spurious interference signal.
5. To find more FM stations press the Auto button (on the remote control) to repeat the scan operation. To scan down in frequency, press the Tuning Down button (on the radio) or the Tuning Down button (on the remote control) and then the Auto button. Your radio will scan down the FM band from the currently displayed frequency and will stop scanning when it finds a signal of sufficient strength.
6. Alternatively press and hold the Tuning Up on the radio to scan up in frequency or the Tuning Down button to scan down the FM band.
7. When the end of the waveband is reached your radio will recommence tuning from the opposite end of the waveband. Use the Volume buttons to adjust the sound level as needed.

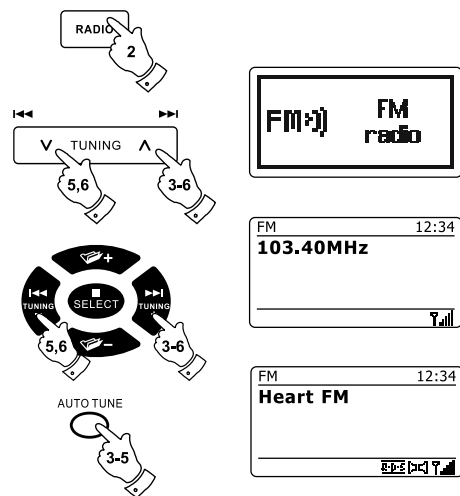

## Manual tuning

1. Carefully extend the telescopic aerial and press the Standby button to switch on your radio.
2. Press the Radio button as needed to select FM radio mode.
3. Press the Tuning Up or Down buttons (on the radio) or Tuning Up or Tuning Down buttons (on the remote control) to control the frequency that the radio will tune to. The frequency will change in steps of 50kHz. When the end of the waveband is reached the radio will recommence tuning from the opposite end of the waveband.
4. Use the Volume buttons to adjust the sound level as needed.



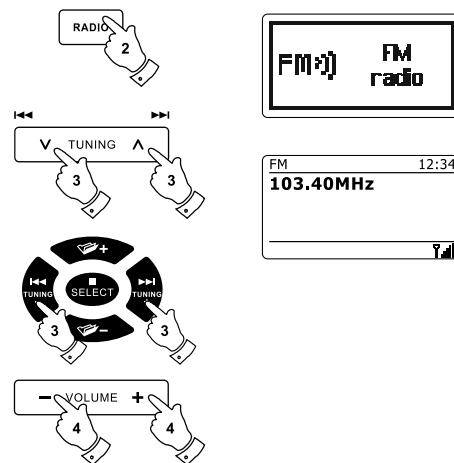


## Display modes

Your radio has a range of display options when in FM mode:-

1. Press the Info button to cycle through the different options.

- |                 |  |
|-----------------|--|
| a. Text         | Displays text messages such as the artist or track name, phone in number, traffic alerts, etc. |
| b. Program Type | Displays the type of station being listened to such as Pop, Classic, News etc.                 |
| c. Frequency    | Displays the frequency of the FM signal.   |
| d. Date         | Displays the current date.   |



### Note:

If no RDS information is available, then the radio will only be able to display the frequency. There will be no text or program type information available under these conditions. The radio only provides displays when there is information available. So if there is no text, for example, that display is not available. The RDS indicator at the bottom of the display shows that there is some RDS data present in the broadcast being received. The stereo speaker display shows that the radio is receiving a stereo broadcast (please see also 'Stereo/Mono switching').


## Scan setting

When using the FM mode your radio can be set to either scan local stations or to scan all stations including distant radio stations.




1. Press the Radio button as needed to select FM radio mode.
2. Press and hold the Menu button to enter the FM menu.
3. Press the Folder Up or Down buttons on the remote control (or Tuning Up or Down buttons on the touch panel) until 'Scan setting' is highlighted and then press the Select button to enter the scan adjustment mode. The current scan setting is indicated with an asterisk.
4. To set your radio so that only the stations with the strongest signals are found during scanning press the Folder Up or Down buttons until 'YES' is highlighted. Press the Select button to confirm the setting. (Normally this will restrict scanning to local transmissions.)

Alternatively, to set your radio so that all available stations are found during scanning (local and distant transmissions) press the Folder Up or Down buttons until 'NO' is highlighted. Press the Select button to confirm the setting.

5. Press and hold the Menu button to return to the normal FM mode display.

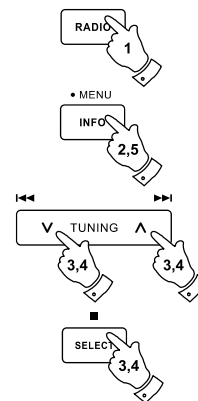

GB







## Stereo / Mono switching

If the FM radio station being listened to has a weak signal, some hiss may be audible. It is possible to reduce this hiss by forcing the radio to play the station in mono rather than stereo.

1. Press the Radio button as needed to select the FM radio mode display and tune to the required FM station as previously described.
2. Press and hold the Menu button to enter the FM menu.
3. Press the Folder Up or Down buttons until 'Audio setting' is highlighted on the display. Press the Select button to enter the audio setting mode. The current setting is indicated with an asterisk.
4. To switch to mono in order to reduce the hiss from a weak FM signal press the Folder Up or Down buttons until 'YES' is highlighted. Press the Select button to confirm the setting.

Alternatively, to return to the normal automatic 'stereo or mono' mode press the Folder Up or Down buttons until 'NO' is highlighted. Press the Select button to confirm the setting.

5. Press and hold the Menu button to return to the normal FM mode display.

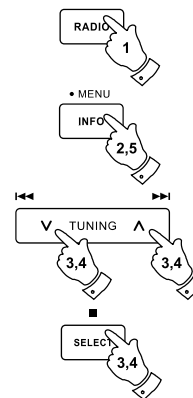



## Presetting stations in FM modes

There are 10 memory presets for FM radio. They are used in the same way for each operating mode.



1. Press the Standby button to switch on your radio.
2. Tune to the required radio station as previously described.
3. To store the station as a preset, press and hold the required Preset button (1 - 10) until the display shows 'Preset stored'. The station will be stored under the chosen preset button. Repeat this procedure as needed for the remaining presets.
4. Stations which are already stored in the presets may be over written by following the above procedure.

### Note:


The radio station presets are retained in memory when the radio is switched off and disconnected from the mains supply.

## Recalling a preset in FM mode

1. Press the Standby button to switch on your radio.
2. Select the required operating mode using the Radio button.
3. Momentarily press the required Preset button. Your radio will then tune to the station stored in the selected preset memory. The chosen preset number is also shown in the lower area of the radio display, e.g. 'P2'.
4. Alternatively, use the Folder Up or Down buttons (on the remote control) to access FM presets already stored.

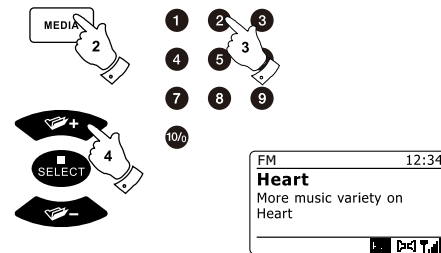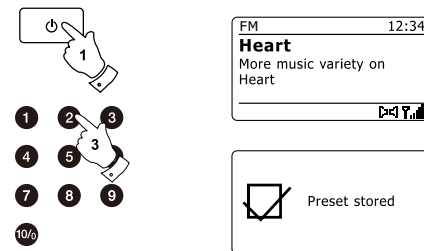

## Compact discs

Use only Digital Audio CDs which have the  symbol.

### **DO NOT USE THESE TYPES OF DISC:**

**Mini (8cm) CDs. Use only full-size 12cm discs. Mini CDs will jam the feed mechanism.**

**Discs which do not have a complete metallic reflection layer. Discs with a large transparent section will not be detected and may fail to play or eject.**

**Discs which are extra thin or flexible. Such discs may fail to feed in or out correctly and may jam the CD mechanism.**

Never write on a CD or attach any sticker to the CD. Always hold the CD at the edge and store it in its box after use with the label facing up.

To remove dust and dirt, breathe on the CD and wipe it with a soft, lint free cloth in a straight line from the centre towards the edge. Cleaning agents may damage the CD.


Do not expose the CD to rain, moisture, sand or to excessive heat. (e.g. from heating equipment or in motor cars parked in the sun). CD-R/CD-RW discs

## CD-R/CD-RW discs

You can playback CD-DA format audio CD-R/CD-RW discs that have been finalized upon completion of recording.

You may fail to play some CD-R/CD-RW discs due to poor recording and wide variation in quality of the CD-R/CD-RW disc.








Finalizing enables a CD-R/CD-RW disc to playback on audio players such as yours. A disc which has not been finalized may have information added to it using a computer but may always be playable.

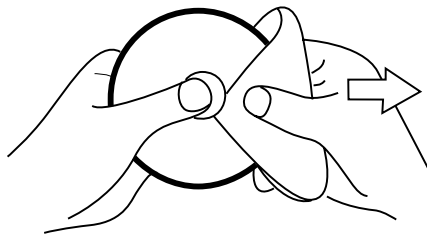

## Inserting a CD


Ensure the CD player is empty before inserting a disc. If there is a disc in the player then the CD indicator will be lit. If you cannot insert a disc, press the CD Eject button to remove the CD currently in the player.

1. Press the Standby button to switch on your radio.
2. To select the CD mode press the Media button until 'CD' shows on the display.
3. To eject a CD press and release the CD Eject button. To reload a CD that has just been ejected, press the Eject button a second time.
4. Insert a disc with printed side facing up into the CD slot. The disc will be loaded automatically. The unit will check the CD type and load its track list. The display will show 'Loading' and then 'Reading' as the information is read.
5. If you load a disc containing MP3 or WMA files your radio will enter the MP3 / WMA mode.





## Playing a CD

1. Press the Play / Pause button to start playing the disc. The display will show the first track number.
2. Adjust the Volume to the required setting.
3. To pause playing press the Play / Pause button. To resume press the Play / Pause button again.




4. To stop play, press the Stop button. The total number of CD tracks and the stop symbol (■) will be displayed. If you put the unit into standby mode without pressing the Stop button, then the next time the unit is switched on it will return to the previously played track.
5. To take out the CD, press the CD Eject button. The display will show 'Eject'. In order to protect the disc if it is not removed, the unit will reload the CD after 10 seconds and then enter standby mode.






## Selecting a track

1. While the CD is playing, press either the Fast-forward or Rewind buttons to change to the desired track. The updated track number is shown in the display.
2. You can also skip tracks when the player is paused or stopped. Skip to the desired track using the Fast-forward or Rewind button, release the button when the desired track is displayed.
3. Press the Play / Pause button to play the selected track.

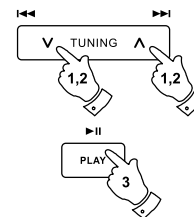

## Selecting a desired track

1. For track numbers 1-9 simply press the corresponding digit button. For track numbers ten and above press the required digits using the 10/0 button to enter the digit zero.
2. If the track number entered exceeds the number of tracks on the CD, then the last track on the CD will be played.

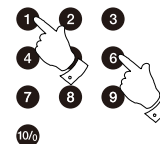

## Search function

1. While the CD is playing, press and hold the Fast-forward or Rewind button. Release the button when the desired part of the track is reached.

## Repeat a single track

2. While the CD is playing, press the Repeat button until the repeat single track symbol (C1) appears in the display. The current track will be repeated.

## Repeat all tracks


3. While the CD is playing, press the Repeat button until the repeat all tracks symbol (C2) appears in the display. All of the tracks on the CD will be played repeatedly.

## Play tracks introduction

4. While the CD is playing, press the Repeat button until the track introduction symbol (INTR) appears in the display. The first 10 seconds of each track will be played. When the desired track is reached, press the Repeat button once more to revert to normal play mode.

## Shuffle tracks

5. While the CD is playing, press the Random button (on the remote control) until the shuffle symbol (X) appears in the display. The tracks will be shuffled. To cancel the shuffle function, press the Random button a second time.

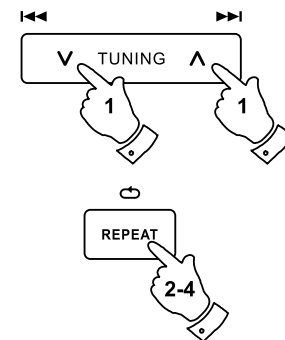

GB




## CD track programming

In addition to playing of complete CDs, selected tracks, or a random selection, the CD player allows you to program a sequence of up to 20 tracks to be played in whatever order you choose.

1. With the unit in CD mode and with a CD inserted, make sure that the CD is stopped (press the Stop button).
2. To enter programming mode, press the Auto button (on the remote control).
3. Choose the first track using the Fast-forward or Rewind buttons.
4. Press the Auto button to enter the selected track into the program.
5. Choose another track using the Fast-forward or Rewind buttons, and enter it into the program using the Auto button (track 10 in example shown).
6. Repeat step 5 to store as many as 20 tracks in the program.
7. When the program is complete, press the Play / Pause button to start playing. The tracks will then be played in the order that you have just programmed.
8. Pressing the Stop button, or switching to another operating mode will erase the program.

### Note:

If you are programming the tracks using a CD with MP3 or WMA files in folders (see the following sections), you can also use the Up or Down Folder buttons to specify the folder in steps 3 and 5 above.

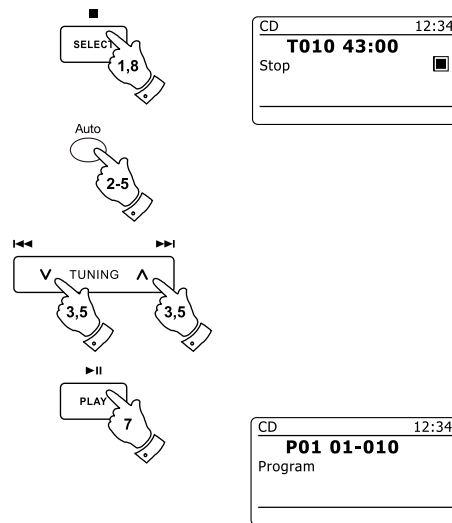



## MP3 / WMA CD Mode

The is able to play CD-R and CD-RW discs containing MP3 and WMA files. It is assumed in this section that a file is equivalent to a CD track.

An MP3 / WMA CD may not contain more than 512 files and not more than 99 folders. MP3 and WMA files should be created with an audio sample rate of 44.1kHz (this is normal for files created from CD audio content). MP3 and WMA data rates up to 320 kilobits per second are supported. WMA Lossless files are not supported. The unit will not play files which include digital rights management (DRM) protection.


When burning CD-R and CD-RW discs with audio files, various problems may arise which could lead to problems with playback. Typically such problems are caused by poor CD writing or audio encoding software, or by the hardware settings of the PC's CD writer, or by the CD being used. Should such problems arise, contact the customer services of your CD writer or software manufacturer or look in their product documentation for relevant information. When you are making audio CDs, take care to observe all legal guidelines and ensure that the copyright of third parties is not infringed.

1. To select the CD mode press the Media button until 'CD' shows on the display, or insert a suitably prepared CD-R or CD-RW disc.
2. Insert a CD with printed side facing up into the CD slot. The disc will be loaded automatically. The unit will check the CD type and load its track list. The display will show "loading" and then "reading" as the information is read. If there are many files or folders on the CD then it may take some tens of seconds to read all of the file and folder names and to identify those which are playable (with .mp3 or .wma filename extension).




## Playing an MP3 / WMA CD

1. Press the Play / Pause button to start playing from the CD. The display will show the first folder and file numbers - "01" and "001".
2. To pause playing press the Play / Pause button. To resume playing press the Play / Pause button again.
3. To stop play, press the Stop button. The total number of files on the disc and 'Stop' will be displayed. If you put the unit into standby mode without pressing the Stop button, then the next time the unit is switched on it will return to the previously played file.
4. To take out the CD, press the CD Eject button. The display will show 'Eject'. In order to protect the disc if it is not removed, the unit will reload the disc after 10 seconds and then enter standby mode. To reload a CD that has just been ejected, press the Eject button a second time.



## Selecting a file


1. While the CD is playing, press either the Fast-forward or Rewind buttons to change to the desired file. The file number is updated in the display. If there is more than one folder, when all files in the current folder have been played the next folder will be played.
2. You can also skip files when the player is in stop mode. Skip to the desired file using the Fast-forward or Rewind buttons and release the button when the desired file number is displayed.
3. Press the Play / Pause button to play the selected file.

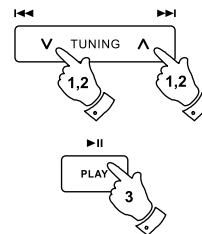




## Select a specific file

1. For file numbers 1-9 simply press the corresponding digit button. For file numbers ten and above press the required digits using the 10/0 button to enter the digit zero.
2. If the file number entered exceeds the number of playable files on the CD, then the last file will be played.  
File numbers up to 512 may be entered. The numbers of files in folders are added together. So, for example, if the first two folders each contain 10 files, then entering 15 will play the fifth file in the second folder.


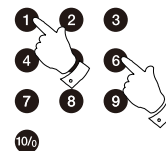


GB



## Search function

1. While the MP3 / WMA CD is playing, press and hold the Fast-forward or Rewind buttons. Release the button when the desired part of the current file is reached.

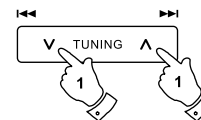

## To skip to another folder

1. With the MP3 / WMA CD in stop or play mode, press and release either the Up or Down Folder buttons (on the remote control). The first file of the next or previous folder will be played.

## Repeat, Intro, shuffle and Programmed play






The allows you to use the same playback options for files as can be used for conventional audio CDs. In addition to Repeat Once and Repeat All options, there is also a Repeat Folder facility.

## Display modes

Your radio has a range of display options when in MP3 / WMA CD mode. Note that not all information may be available for all files.

1. Press the Info button to cycle through the different options.

- |              |   |
|--------------|---|
| a. Progress  | Displays the playback progress for the track currently playing.         |
| b. File name | Displays the file name and audio format of the track currently playing. |
| c. Album     | Displays the name of the album from which the current track is taken.   |
| d. Artist    | Displays the name of the artist for the currently playing track.        |
| e. Title     | Displays the title of the currently playing track.                      |



## Using SD cards or USB memory devices

This section describes how to use your radio to access and playback your audio files via USB memory devices and Secure Digital (SD, SDHC) cards. The can also record to SD, SDHC or USB media in MP3 format.

### Important:

Your radio is only designed to work with USB memory flash memory devices. It is not intended to be connected to hard disk drives or any other type of USB device.

The has been tested with a range of USB memory devices of up to 64GB capacity and SD cards up to 2GB and SDHC cards up to 16GB are supported. However, there are many different card variants available and not all cards can be guaranteed to work in the. Memory must use the FAT 32 filingsystem in order to operate in the.


Audio formats supported for playback are MP3 and WMA. Playback doesnot support files encoded using WMA lossless, WMA Voice, WMA 10 professional, nor files of any format which have DRM protection.

SD card and USB slots are located behind the front panel beneath the touch panel. This is opened by pushing and releasing the right hand corner of the panel. To close the panel, press the right-hand side of the panel door until it clicks back into place.

***Do not attempt to open or close the panel door using the left hand edge as this may distort or damage the panel.***

### Cautions:

In order to minimize the risk of damage to your radio, your SD card or your USB Memory, please place the unit such that the device cannot easily be knocked while it is inserted in the socket. Remove the USB or SD card before carrying the unit or if not using the USB or SD feature for a prolonged period. Place the unit in Standby mode removing your SD card or USB memory device.

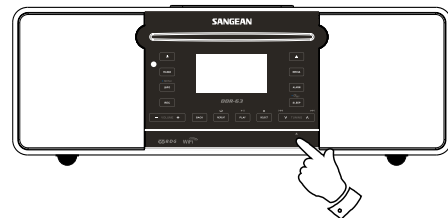

GB

## Inserting and removing memory devices

1. To insert an SD card into your radio push the card label side upward and gold contacts first into the card slot on the front of your radio until it clicks. To remove the card, push the card in so that it clicks once more. It will then be pushed out slightly allowing removal.

USB memory devices plug into the rectangular slot on the right hand side, behind the front panel.



**Note:** that the USB socket is upside down compared to those commonly found on PCs.

2. To select either SD card or USB mode press the Media button until the desired mode is shown on the display.

## Playing MP3 / WMA files - SD / USB


1. Press the Play / Pause button to start playing from the SD card / USB memory device. The display will show the first folder and file numbers - " 01" and " 001".
2. To pause playing press the Play / Pause button. To resume playing press the Play / Pause button again.
3. To stop play, press the Stop button. The total number of files and folders on the media and the stop symbol ( ■ ) will be displayed.

If you put the unit into standby mode without pressing the Stop button, then the next time the unit is switched on it will return to the previously played file.






## Selecting a file

1. While the SD card / USB memory device is playing, press either the Fast-forward or Rewind buttons to change to the desired file. The file number is updated in the display. If there is more than one folder, when all files in the current folder have been played the next folder will be played.
2. You can also skip files when the player is in stop mode. Skip to the desired file using the Fast-forward or Rewind buttons and release the button when the desired file number is displayed.
3. Press the Play / Pause button to play the selected file.

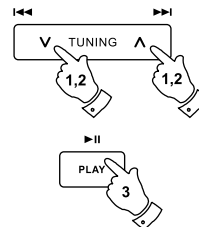

## Select a specific file

1. For file numbers 1-9 simply press the corresponding digit button. For file numbers ten and above press the required digits using the 10/0 button to enter the digit zero.
2. If the file number entered exceeds the number of playable files on the SD card / USB memory device, then the last file will be played.

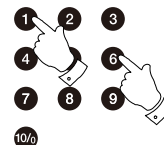



File numbers up to 512 may be entered. The numbers of files in folders are added together. So, for example, if the first two folders each contain 10 files, then entering 15 will play the fifth file in the second folder.

## Search function

1. While the SD card / USB memory device is playing, press and hold the Fast-forward or Rewind buttons. Release the button when the desired part of the current file is reached.

## To skip to another folder

1. With the SD card / USB memory device in stop or play mode, press and release either the Up or Down Folder button (on the remote control). The first file of the next or previous folder will be played.

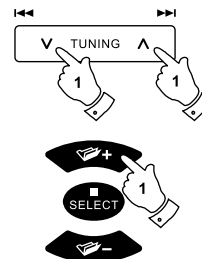

## Repeat, Intro, shuffle and Programmed play

This allows you to use the same playback options for files as can be used for conventional audio CDs. In addition to Repeat Once and Repeat All options, there is also a Repeat Folder facility.

## Recording to SD / USB




Your radio has been designed to allow you to make recordings to SD / SDHC cards or to USB connected memory devices. Recordings are made in MP3 format at 128k bits per second.

SD / SDHC or USB memory media must use the FAT32 file system in order to operate with the. Such media is usually supplied already formatted or can be formatted using a PC with a suitable card reader (for SD / SDHC cards) or USB connection (for USB memory).

It is possible to record onto media which already contains files written by the radio or using your computer. The recorded files will be added to those already present on the media.

## Making a recording

1. Select the desired source for the recording (Internet Radio, FM, CD, etc.). Internet Radio is shown in the illustration. Set the volume to the required listening level (the volume of the recording will not be affected by this).
2. Insert the media on to which the recording is to be made.
3. Press the Record button. The display will show "Record initial...". Recording will then start with the recording source shown on the display. If only one media type is present, then after a short while recording will start. If both SD and USB media are detected, then the radio will default to the option previously set. The default media option is accessed through the 'System settings' menu then by selecting 'Rec default dest.'. Select 'SD card' or 'USB' memory as needed.

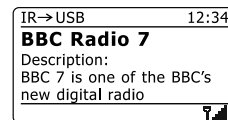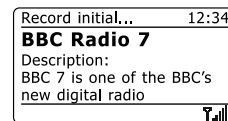

## Making a recording cont.

If recording from a CD, recording will be started from the beginning of the currently playing track. Each track on the CD will be recorded as a separate file on the media.

4. In order to stop the recording press the Record button once more. Recording will stop and a file will have been written to the storage media.


Files that have been written to the media are held in a folder called "RECORD". Recordings are held in sub-folders according to the source used for the recording.

The illustration shows the folders as they may appear on a PC running Windows with files in the CD folder being shown on the right.

### Note:

The SD card / USB memory device should only be removed when recording is stopped. Removing media while recording is in progress may corrupt data on the card leading to the loss of files previously written.

The USB connection is primarily intended to be used to allow the to play MP3 and WMA files from solid-state flash memory devices. You may be able to play files which have been stored on a USB hard disc drive (but the drive must have its own power supply). If you wish to play files from another music player, then we recommend that this is connected to the Auxiliary input socket.







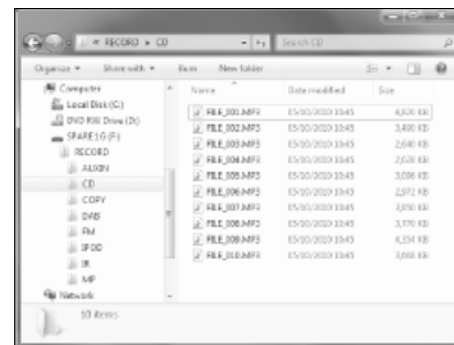




## Recording MP3 / WMA files from CD / SD / USB

In addition to recording from conventional sources, the radio can also record from MP3 or WMA files that have previously been written to CD, SD or USB media. In this case the files are copied rather than re-encoded to MP3 in order to avoid a reduction in quality. You may copy files from CD or SD to USB and from CD or USB to SD.

1. Select the desired source for the recording (SD, USB or CD).
2. Press the Play button to start playing the source media (if it does not automatically start). Set the volume to the required listening level (the volume of the recording will not be affected by this).
3. Insert the media that the files will be recorded on to (SD or USB).
4. Press the Record button. The display will show "Record initial...".
5. If only one media type is present, the audio will stop while the source media is taken back to the beginning of the current file. Recording will then start.
6. If both SD and USB media are detected, then the radio will default to the option previously set. The default media option is accessed through the 'System settings' menu then by selecting 'Rec default dest.'. Select 'SD card' or 'USB' memory as needed. The source media will be taken back to the beginning of the current file and recording will then start.
7. In order to stop the recording press the Record button once more. Recording and playback will stop and all files that have been played will have been copied to the storage media.



## Deleting files

After having recorded files to SD or USB media, you may later wish to delete them in order to reclaim the space used. The can be used to delete individual files, or to delete all of the media files on the media.


### Deleting a single file

1. With the radio in USB or SD mode, and with the media inserted and the file you wish to delete is currently playing, press and hold the Menu button.
2. Press the Folder Up or Down buttons on the remote control (or Tuning Up or Down on the touch panel) until 'Delete this file' is highlighted on the display.
3. Press the Select button. The display will ask you if you wish to 'Delete this file?'
4. If you do not wish to delete the file, use the Folder Up or Down button to highlight 'NO' and press the Select button to confirm.

Alternatively, to delete the file use the Folder Up or Down button to highlight 'YES' and press the Select button to confirm deletion.

The file will be deleted and the details of the next file will be displayed. If there are no more files left on the media, then the display will show 'No Music File'.

**Note:** Once a file has been deleted, it is not possible to recover the file.

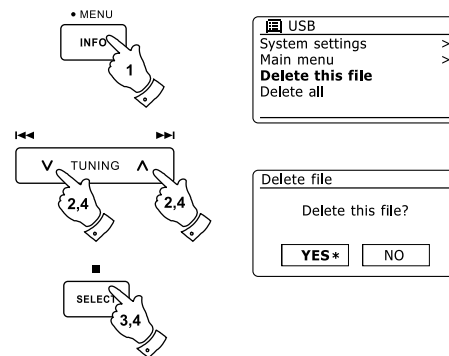

## Deleting files cont.


### Deleting all files

1. With the radio in USB or SD mode, and with the media inserted press and hold the Menu button.
2. Press the Folder Up or Down buttons until 'Delete all' is highlighted on the display.
3. Press the Select button. The display will ask you if you wish to 'Delete all files?'
4. If you do not wish to delete all the files, use the Folder Up or Down button to highlight 'NO' and press the Select button to confirm.

Alternatively, to delete all the files on the media use the Folder Up or Down button to highlight 'YES' and press the Select button to confirm deletion.

All the files will be deleted. If there are no more files left on the media, then the display will show 'No Music File'. The operation will generally only take a few seconds. When completed, the display will show 'No Music File'.

**Note:** Once the files have been deleted, it is not possible to recover the previous contents.

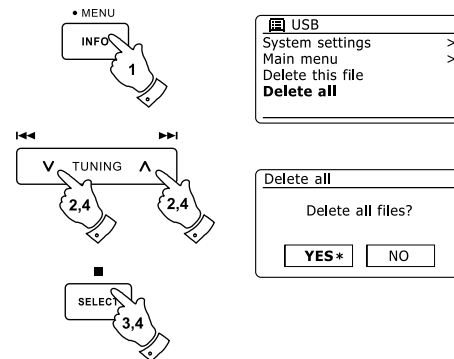



## iPod Docking

Your radio has an iPod dock facility which allows you to play digital audio files and video soundtracks held on your iPod directly. The uses the Universal Dock Connector developed for use with iPods. Most recent models of iPod are supplied with adaptor inserts which ensure correct alignment of the iPod with the electrical connector. Earlier models of iPod were not supplied with the necessary inserts, and so your is supplied with insert types 1 - 7. Should you require an insert to use your iPod with the, then please contact an iPod accessories supplier.

1. Ensure that the radio is in standby. Carefully remove the iPod dock connector cover from the top of your radio.
2. Place the iPod docking adaptor (see above) into the iPod docking recess so that it is securely seated.
3. Carefully place your iPod on the universal iPod dock connector then press the Standby button to switch on the radio. **To avoid possible damage to either device, do not use your iPod without the correct adaptor fitted in the dock connector.**
4. To select the iPod mode press the Media button until 'iPod' shows on the display. If it was previously playing, your iPod will switch on and continue playing from where it was previously stopped.

### Note:

The radio is able to recharge your iPod's internal battery. Recharging does not take place while your is using FM radio. Your iPod will use its backlight settings as configured. If these need changing, use the iPod's Settings menu.

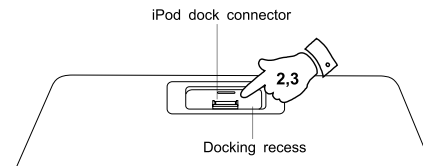

## Navigating your iPod

1. Use the Menu button on the remote control to navigate to higher level menus on your iPod.
2. Use the Folder Up or Down buttons on the remote control as required to move up and down a menu screen on your iPod.
3. Press the Select button to choose the highlighted on screen menu item. If this item is a lower level menu item, you may then navigate further using the Folder Up or Down and Select buttons.

### Note:


iPod models vary in how they respond to the menu button. Not all iPods allow full menu navigation.

## Playing a file on your iPod



1. When you have found the required item use the Select button to start the iPod playing (or the Play / Pause button - but see note below).
2. Adjust the volume to the required setting using the Volume buttons on your radio.
3. To pause playback press the Play / Pause button. To resume playback press the Play / Pause button again.
4. iPod's do not have a Stop button (they use the Pause function). To play an alternative selection, use the iPod menus to make the selection using the Play / Pause button to stop playing the current item if needed.

### Note:

iPods vary in how they respond to the Play / Pause button dependent upon the iPod model and software revision. Play / Pause may pause and resume the current selection, or it may pause the current selection and then start playing a new selection. The use of the Select button to start playing an item avoids this inconsistency.




GB



## Search function

1. While the iPod is playing, press and hold the Fast-forward or Rewind buttons.
2. Release the button when the desired part of the item is reached.

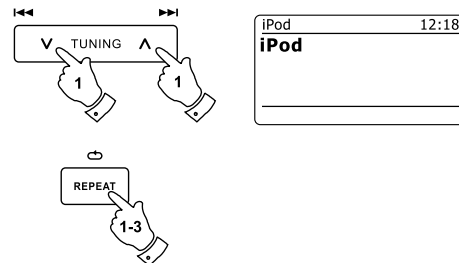

## Repeat a single file

1. While the iPod is playing, press the Repeat button until the repeat single file symbol appears in the iPod display. The currently playing item will be repeated.

## Repeat all

2. While the iPod is playing, press the Repeat button until the repeat all files symbol appears in the iPod display. All files in the current album or playlist will be repeated.

## Repeat cancel

3. While the iPod is playing, press the Repeat button until the repeat symbol is removed from the iPod display. Remaining files in the current album or playlist will be played.

## Shuffle

4. While the iPod is playing, press the Random button to control the shuffle symbol in the iPod display. The tracks in the current album or playlist will be shuffled when shuffle is enabled.








## Clock and Alarms

### Automatically updating the clock

Your radio will normally update the clock automatically when connected to the internet. If you enter a time setting manually, the radio will calculate a local time offset which is then stored in memory. Whenever it synchronizes the clock using the internet, including after a power failure, your radio will then set the clock automatically using this information. You may wish to use the radio away from the internet, in which case you may specify that the unit sets its clock from FM radio broadcasts.

After a power failure the radio will then set its clock the next time that you turn on the radio in or FM mode. Alternatively you may specify that the time is not automatically updated. In this case the clock must always be set manually after a power interruption.

1. With your radio switched on, press and hold the Menu button to access the menu for the current mode.
2. Press the Folder Up or Down buttons until 'System settings' is highlighted on the display. Press the Select button to enter the system settings menu.
3. Press the Folder Up or Down buttons until 'Time/Date' is highlighted on the display. Press the Select button to enter the time setup.
4. Press the Folder Up or Down buttons until 'Auto update' is highlighted on the display. Press the Select button to enter the auto-update menu.
5. Press the Folder Up or Down buttons to choose an update option from 'Update from FM', 'Update from Network' or 'No update' as required. Press the Select button to confirm your choice. The radio will then exit to the previous menu display.

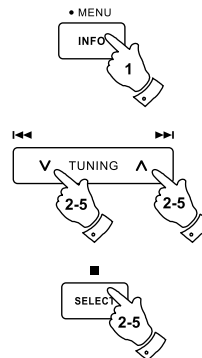


## Setting the clock format

The clock display used in standby mode and on the playing mode screens can be set to 12 or 24 hour format. The selected format is then also used when setting the alarms.

1. With your radio switched on, press and hold the Menu button to access the menu for the current mode.
2. Press the Folder Up or Down buttons on the remote control (or the Tuning Up or Down buttons on the touch panel) until 'System settings' is highlighted on the display. Press the Select button to enter the system settings menu.
3. Press the Folder Up or Down buttons until 'Time/Date' is highlighted on the display. Press the Select button to enter the time setup.
4. Press the Folder Up or Down buttons until 'Set format' is highlighted on the display. Press the Select button to enter the clock format menu. The current clock display format is marked with an asterisk.
5. Press the Folder Up or Down buttons to select either 12 or 24 hour format. Press the Select button to confirm your choice of clock format. The display will then revert to the previous menu.

If the 12 hour clock format is chosen, the radio will then use the 12 hour clock for the setting of alarms, and will display a 12 hour clock with an AM or PM indicator when in standby mode.

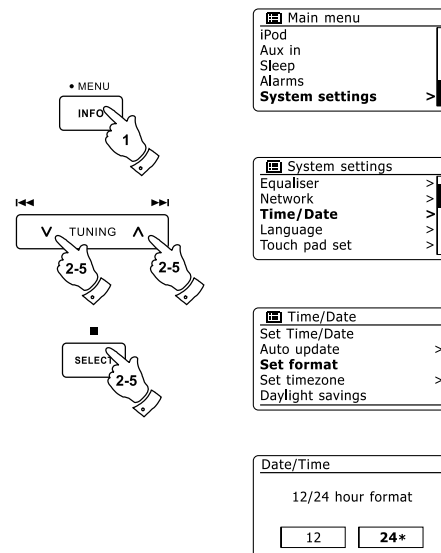




## Manually setting the clock








The radio will normally set its clock automatically to UK time after a connection to the Internet has been established. Should you need to set the time manually, change the time zone, or manually switch from winter to summer time (GMT to BST - also known outside the UK as daylight savings time), then please follow this procedure.

1. Press the Standby button to switch on your radio. To set the time and date press and hold the Clock/Set button then follow steps 6 to 10.
2. To set all time settings press and hold the Menu button to access the menu for the current mode.
3. Press the Folder Up or Down buttons until 'System settings' is highlighted on the display. Press the Select button to enter the system settings menu.
4. To change the time zone setting go to step 11. To change from winter to summer time go to step 13. To change the current time or date setting press the Folder Up or Down buttons until 'Time/Date' is highlighted on the display, then press the Select button to enter the time and date setting screen.
5. Press the Folder Up or Down buttons until 'Set Time/Date' is highlighted on the display. Press the Select button to enter the clock setup. The day digits will fl ash.
6. Press the Folder Up or Down buttons until the correct day is shown on the display. Press the Select button to enter the selection. The month digits will then fl ash.
7. Press the Folder Up or Down buttons to select the correct month. Press the Select button. The year digits will then fl ash.

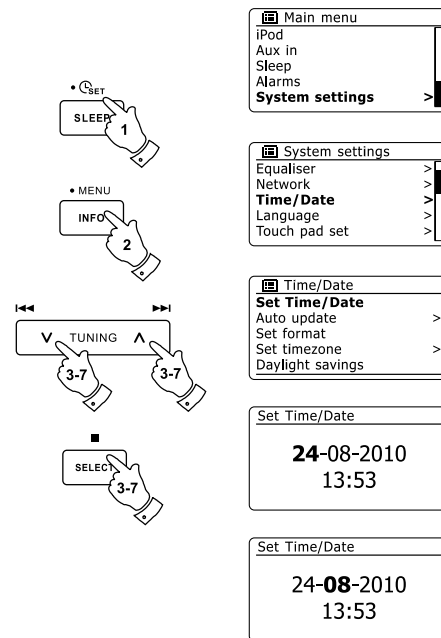

## Manually setting the clock - cont.


8. Press the Folder Up or Down buttons to select the correct year. Press the Select button to enter the selection. The hour digits will then flash.
9. Press the Folder Up or Down buttons to select the correct hour. Press the Select button to enter the selection. The minute digits will then flash.
10. Press the Folder Up or Down buttons to select the correct minutes. Press the Select button to enter the selection. The display will then return to the previous menu.
11. Press the Folder Up or Down buttons until 'Set time zone' is highlighted on the display then press the Select button.
12. Press the Folder Up or Down buttons to highlight the time zone which is applicable to your location, then press the Select button to confirm the setting. Press and hold the Menu button to exit or go to step 13 to set the summer/winter time option.
13. Press the Folder Up or Down buttons until 'Daylight savings' is highlighted on the display then press the Select button. The asterisk shows the current setting. In the UK, ON is equivalent to British Summer Time, OFF is equivalent to Greenwich Mean Time.
14. Press the Folder Up or Down buttons to highlight 'ON' or 'OFF' as required then press the Select button to confirm the setting.
15. Press and hold the Menu button to exit.



## Setting the alarm clock

Your radio has two separate alarms which can be set to wake you to either the radio, CD, USB, SD, iPod or a buzzer alarm. In the event of a power interruption your radio has built in memory that will retain your alarm settings. Ensure that the time is set correctly before setting the alarms.

1. Press the Alarm button to see the current alarm settings. If no change is required, press and hold the Menu button or press the Back button to exit. The Alarm menu can also be accessed using the 'System settings' menu.
2. Press the Folder Up or Down buttons until the desired alarm (1 or 2) is highlighted on the display. Press the Select button to enter alarm setup.
3. Press the Folder Up or Down buttons until 'Time' is highlighted on the display. Press the Select button to adjust the alarm time.
4. Press the Folder Up or Down buttons to choose the alarm hour. Press the Select button to confirm the setting.
5. Press the Folder Up or Down buttons to choose the alarm minute. Press the Select button to confirm the setting. The display will then return to the alarm setting menu. If the radio has been set to use a 12 hour clock format, there will also be an option here for setting AM or PM for the alarm time.

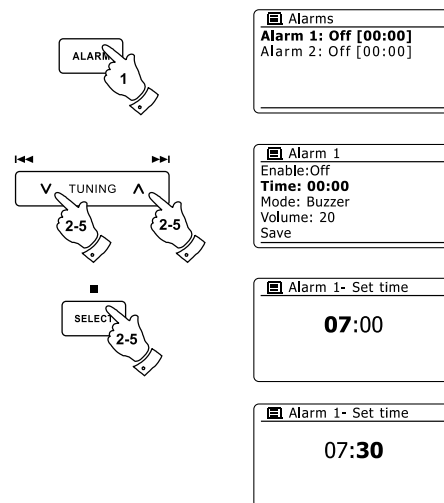

## Setting the alarm clock - cont.

6. Press the Folder Up or Down buttons to highlight 'Enable' and press the Select button. The display will show the Frequency options for the alarm. The alarm frequency options are as follows:

'Off' - the alarm will be disabled

'Daily' - the alarm will sound everyday

'Once' - the alarm will sound once









'Weekends' - the alarm will sound only at weekends

'Weekdays' - the alarm will sound on weekdays only

Press the Folder Up or Down buttons to choose the required alarm frequency option. Choosing Off will disable the alarm. Press the Select button to confirm the selection. If you choose to set the alarm to Once you will also need to set the date using the Folder Up or Down and Select buttons.

7. The alarm can be set to buzzer, Internet radio, FM radio, CD, USB, SD and iPod. For whichever radio mode is selected, the radio alarm may be set to any of the stations which have been stored as presets or to the station most recently listened to. Press the Folder Up or Down buttons to highlight the current 'Mode' option for the alarm, then press the Select button if you wish to change it. Press the Folder Up or Down buttons to highlight either 'Buzzer' or the required mode. Press the Select button to confirm the selection.

8. If setting the alarm to a radio option, Press the Folder Up or Down buttons to highlight the 'Preset:' option then press the Select button if you wish to change it. Choose from either the radio station 'Last listened to', or from the presets 1 - 10. Scroll to the chosen option and press the Select button to confirm the selection. Note that you can only set the alarm to use a preset which has already been stored.

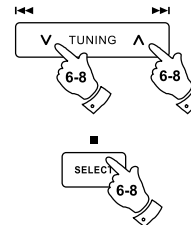

## Setting the alarm clock - cont.




9. Press the Folder Up or Down buttons until the 'Volume:' option is highlighted on the display and press the Select button if you wish to change it. The radio uses the saved volume setting for each alarm when it sounds. Set the required volume using the Folder Up or Down buttons and the Select button to confirm the setting.
10. In order to store the alarm settings press the Folder Up or Down buttons until 'Save' is highlighted. Press the Select button to store the alarm settings. Your radio will show 'Alarm saved' and will then go back to the list of alarms with the new alarm setting shown in the display. If you decide not to save the settings, press the Back button. The display will show 'Save changes' with a 'YES' or 'NO' option. Press the Folder Up or Down buttons to choose 'NO' and then press the Select button. 'Alarm not saved' will show on the display. Active alarms are shown using small alarm indicators at the bottom of the playing displays and on the clock display when in standby.

### Note:



If you make a mistake at any point while setting the alarms, use the Back button to go back to the previous screen.

## When the alarm sounds

The buzzer or radio alarm will sound at the selected times for up to 60 minutes unless cancelled. The volume used for the alarm will be as specified during the alarm setting procedure. If the radio cannot connect to the specified radio station, the buzzer alarm will be used instead. To cancel an alarm, press the Standby button to return to standby mode. The alarm icon will flash at the bottom of the playing mode displays, and the radio will automatically switch back to standby mode when the 60 minutes have elapsed.

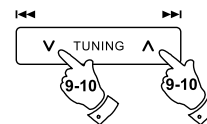


GB



## Disabling alarms

1. To disable a single alarm enter the alarm setup menu and press the Folder Up or Down buttons until the desired alarm is highlighted on the display. Press the Select button.
2. Press the Folder Up or Down buttons until the 'Enable:' option is highlighted on the display. Press the Select button.
3. Press the Folder Up or Down buttons to highlight 'Off' and press the Select button.
4. Press the Folder Up or Down buttons until the 'Save' option is highlighted on the display then press the Select button to save the new setting. The chosen alarm will now be disabled.

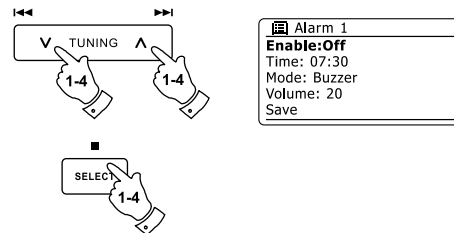

## Controlling alarms in standby


When your radio is in standby the alarms can be controlled using the Alarm button. This avoids the risk of disturbance to someone who is asleep.



1. To change the states of the alarms when in standby press the Alarm button. The display will cycle through none, either and both alarms enabled.

## Snooze timer






1. The buzzer or radio alarm can be silenced for 5 minutes by pressing the Alarm button. Should you wish for a longer snooze duration this can be extended. Pressing the Alarm button again while the radio is snoozed will set the available snooze time to 5, 10, 15 or 30 minutes.
2. While the snooze timer is active the remaining snooze time is shown next to the flashing alarm icon on the clock display.
3. In order to cancel the Snooze timer while the alarm is suspended, press the Standby button. The display will briefly show an 'Alarm Off' message.



## Sleep timer

Your radio can be set to turn off after a preset time has elapsed. The sleep timer setting can be adjusted between 15 and 120 minutes in 15 minute increments.

1. Press the Standby button to switch on your radio.
2. To use the sleep timer, short press the Sleep / Clock set button to enter the sleep setup. 'Sleep off' will appear on the display.
3. Repeatedly press the Sleep / Clock set button to select the desired sleep time. The options are 15, 30, 45, 60, 75, 90, 105 or 120 minutes. Use the OFF option to cancel the sleep function.
4. Your radio will switch off after the preset sleep time has elapsed.
5. Your radio will switch into standby mode after the preset time has elapsed. An active sleep timer is shown using a small timer indicator at the bottom of the playing displays. This indicator also shows the sleep time remaining before the radio switches itself into standby mode.
6. To cancel the sleep time before the preset time has elapsed and to turn off the radio, press the Standby button to turn the unit off manually. To cancel the sleep timer and leave the radio playing, go back into the sleep timer settings (steps 1 to 3 above) and select the Off option in step 3. Alternatively, simply press the Standby button twice in succession to cancel the timer and switch the radio back on again.



The sleep time can also be accessed from the main menu. Use the Folder Up or Down and Select buttons to set the sleep time.


## Display and Audio

### Equalizer function

The sound on your radio can be adjusted to suit your personal taste for the material that you are listening to. The DDR-63 Plus has a range of equalizer modes. Alternatively you may set the treble and bass levels to your own preferences which can be accessed from the My EQ menu item.

1. Press the Standby button to switch on your radio. Access the menu for the current mode by pressing and holding the Menu button. Alternatively press the EQ button on the remote control and proceed to step 4.
2. Press the Folder Up or Down buttons until 'System settings' is highlighted on the display. Press the Select button to enter the system settings menu.
3. Press the Folder Up or Down buttons until 'Equalizer' is highlighted on the display. Press the Select button.
4. Press the Folder Up or Down buttons to cycle through and highlight the various modes. Press the Select button to confirm your selection.
  - a - 'Normal (Flat)'
  - b - 'Jazz'
  - c - 'Rock'
  - d - 'Movie'
  - e - 'Classic'
  - f - 'Pop'
  - g - 'News'
  - h - 'My EQ'

The currently selected mode is marked with an asterisk.

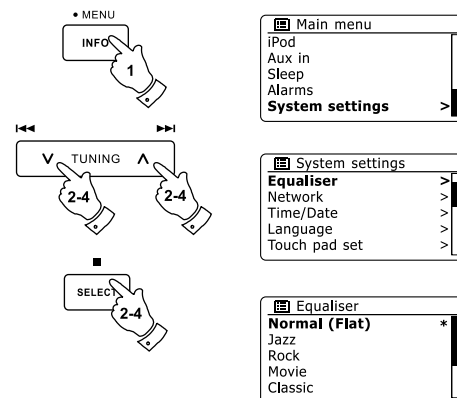








## Setting up your My EQ profile

If you find the preset equalizer functions not to your liking, you may set up a custom treble and bass setting as follows:

1. Follow steps 1-3 on the preceding page in order to enter the Equalizer menu or alternatively press the EQ button on the remote control.
2. Press the Folder Up or Down buttons until 'My EQ profile setup' is highlighted on the display. Press the Select button to enter the adjustment mode.
3. To adjust the bass level press the Folder Up or Down buttons until 'Bass' is highlighted on the display. Press the Select button to enter the adjustment mode and press the Folder Up or Down buttons until the desired level (between -14 and +14) is displayed. The sound will change as you adjust the level. Press the Select button when you are happy with the bass setting.
4. To adjust the treble level press the Folder Up or Down buttons until 'Treble' is highlighted on the display. Press the Select button to enter the adjustment mode and press the Folder Up or Down buttons until the desired level (between -14 and +14) is displayed. The sound will change as you adjust the level. Press the Select button when you are happy with the treble setting.
5. Press the Back button and the display will prompt you to save the changes. If you wish to save the changes highlight 'YES'. If you do not wish to save the changes highlight 'NO'. Press the Select button to enter the selection.
6. To use the 'My EQ' profile press the Folder Up or Down buttons until 'My EQ' is highlighted, and then press the Select button to make the selection.

To quickly cancel the effect of the 'My EQ' profile press the Folder Up or Down buttons until 'Normal (Flat)' is highlighted on the display and press the Select button to select. The treble and bass settings will be remembered for the next time that you wish to use the 'My EQ' setting.

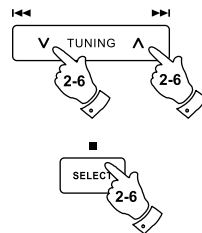


## Brightness control

The brightness of the display can be adjusted for when the radio is in Standby and for when it is in use. If you use the unit in the bedroom, you may prefer a lower standby brightness level than the standard setting. There are three brightness levels and an almost off 'night-time' setting.

1. Press the Standby button to switch on your radio. Access the menu for the current mode by pressing and holding the Menu button.
2. Press the Folder Up or Down buttons until 'System settings' is highlighted on the display. Press the Select button to enter the system settings menu. Press the Folder Up or Down buttons until 'Brightness' is highlighted on the display. Press the Select button.
3. To adjust the display brightness when the radio is switched on press the Folder Up or Down buttons until 'Normal' is highlighted on the display. To adjust the display brightness when the radio is in standby press the Folder Up or Down buttons until 'Standby' is highlighted. Press the Select button to enter the selected brightness adjustment mode.
4. To adjust the brightness level press the Folder Up button on the radio to increase the brightness level and the Folder Down button to decrease it. The backlight level will change so that you can see the effect of each setting. Note that the backlight is almost completely off at the zero setting. Press the Select button to set the level. Press and hold the Menu button to exit.


When the radio is in Standby mode, pressing a button will cause the radio to switch to the Normal brightness level for a few seconds. This is so that even if the Standby brightness level is set to zero (almost off), it is still possible to see the time by quickly pressing a button.

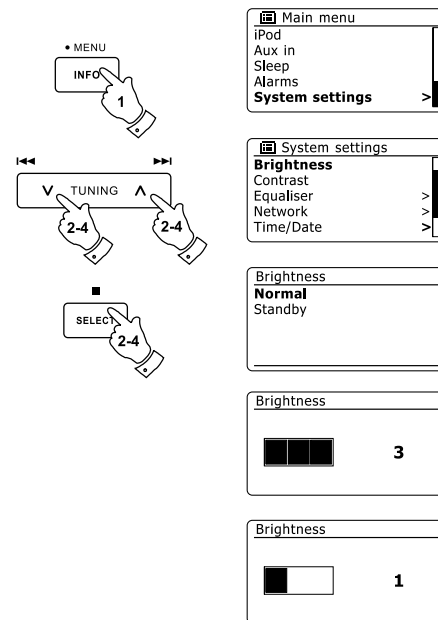

## Contrast / viewing angle control

The contrast of the display can be adjusted. The adjustment also changes the angle from which the display can best be seen.

1. Access the menu for the current mode by pressing and holding the Menu button. Press the Folder Up or Down buttons until 'System settings' is highlighted on the display. Press the Select button to enter the settings menu.
2. Press the Folder Up or Down buttons until 'Contrast' is highlighted on the display and press the Select button.
3. Press the Folder Up or Down buttons to adjust the contrast and viewing angle. The contrast level indication on the screen will change at the same time. When you find the setting that gives the best legibility for the location in which the radio is used, press the Select button to save the setting.
4. Press and hold the Menu button to exit.

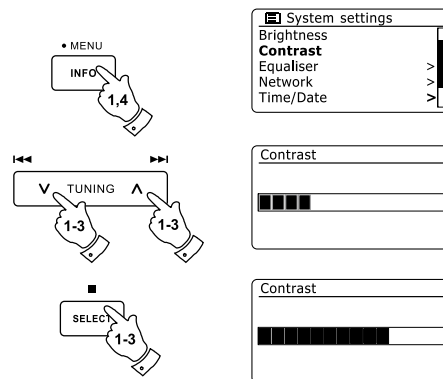

## Mute function

Pressing the Mute button will mute the output from the loudspeakers.


1. Press the Mute button to mute the sound output.
2. Press the Mute button again or one of the Volume buttons to un-mute the sound output.



## Touch panel sensitivity control

The sensitivity of the touch panel may be adjusted. The default setting will normally be found to provide satisfactory operation, however, the touch panel system may respond differently depending upon the moisture of the skin. The touch panel sensitivity may be set to low, normal or high.

1. Access the menu for the current mode by pressing and holding the Menu button.
2. Press the Folder Up or Down buttons until 'System settings' is highlighted on the display. Press the Select button to enter the system settings menu.
3. Press the Folder Up or Down button until 'Touch pad set' is highlighted on the display. Press the Select button to enter the adjustment mode.
4. Press the Folder Up or Down buttons to highlight the desired touch panel sensitivity level.
5. Press and release the Select button to save the new setting.  
The default setting after a system reset is Normal.

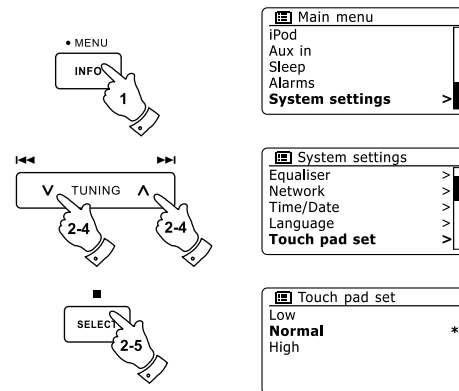

## Headphone socket

A 3.5mm Headphone Socket located on the rear of your radio is provided for use with headphones. Inserting a plug automatically mutes the internal loudspeaker.


Please be aware that the sensitivity of headphones can vary widely. We therefore recommend setting volume to a low level before connecting headphones to the radio. It is also recommended to reduce the volume before unplugging your headphones.

### Important:


Excessive sound pressure from earphones and headphones can cause hearing loss.

## Line out socket (3.5mm Jack)

A 3.5mm Line Out socket located on the rear of your radio is provided for connecting the audio signal to an external amplifier. Inserting an audio cable into this socket will not mute the internal loudspeaker. Set the volume control on the radio to minimum if desired.

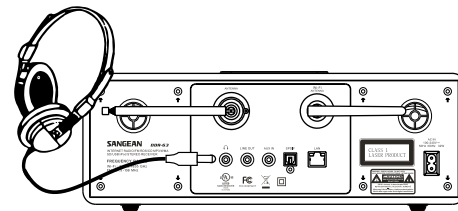

GB

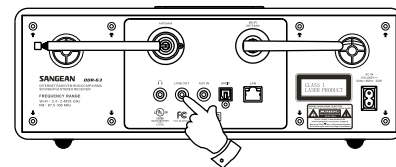

## Auxiliary input socket





A 3.5mm Auxiliary Input socket located on the rear of your radio is provided for connecting the audio signal from an external audio source such as an MP3 or CD player.

1. Connect a stereo lead from the headphone output of your MP3 or CD player to the Aux In socket located at the rear of the radio. Typically this lead will have a 3.5mm stereo plug at both ends.
2. Switch on your radio.
3. Press the Radio button until 'AUX in' mode is shown on the display.
4. Press the 'play' on the connected audio device. If you are using its headphone output for the connection, set its volume control to a level of somewhere between two-thirds and maximum (the objective is to get a strong audio signal but without too much distortion). Then adjust the volume on the radio as required.

### Note:

if using an iPod as the sound source, you may need to set its output to maximum to get an adequate audio signal level.

5. After use, disconnect your player in order to listen to your radio conventionally.

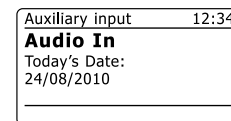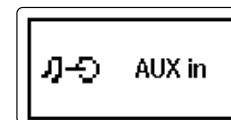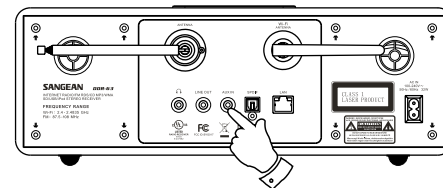

## Optical S/PDIF output socket


A digital output socket providing an S/PDIF signal is provided on the rear of your radio for connection to an amplifier, mini-disc or other equipment with a digital optical input. This feature is not active for iPod or AUX in modes.

## Aerial removal

The fitted telescopic aerial is suitable for most applications. The telescopic aerial may be removed to allow connection to an external aerial using a coaxial cable.

First remove the two small screws holding the antenna connector cover in place (use a small cross-head screw driver). Then using the supplied spanner, remove the telescopic aerial by rotating in an anti-clockwise direction when viewed from the rear of the product.

This will expose an F-type connector to which an external aerial may be connected.

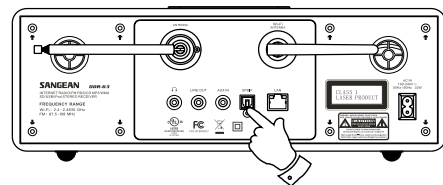





## Information

### Factory reset

If you wish to completely reset your radio to its initial state this may be performed by following this procedure. By performing a factory reset, all user entered settings will be erased.

1. Access the menu for the current mode by pressing and holding the Menu button. Press the Folder Up or Down buttons to highlight the 'Main menu' option, then press the Select button to select.
2. Press the Folder Up or Down buttons until 'System settings' is highlighted and then press the Select button.
3. Press the Folder Up or Down buttons until 'Factory Reset' is highlighted and then press the Select button. Press the Folder Up or Down buttons and to highlight 'YES' to proceed. If you do not wish to carry out a system reset, highlight 'NO' and then press the Select button. The display will revert to the previous menu.
4. With 'YES' highlighted, press the Select button. A full reset will be performed and the radio will restart as if first plugged in. All the stations list together with any preset stations will be erased and your wireless network connection details will be lost. All configuration settings will be restored to their defaults, the clock and alarms will be reset.

In case of malfunction for any reason, reset the product as described above to resume normal operation. It may be necessary in some cases to disconnect the mains power, then reconnect power after 10 seconds. In case of malfunction due to electrical fast transient (burst), reset the product as above (reconnection of the power source may be required) to resume normal operation.

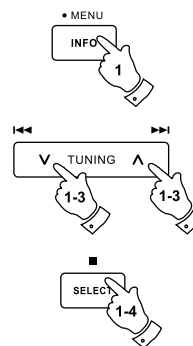




## Software update

From time to time, new software features for your radio may be developed. Your radio has therefore been designed to allow its internal software to be updated using your Internet connection. You should not attempt to update your radio unless it is recommended to you by Sangean Customer Services. Updating the software may remove all network settings, radio station presets and alarm settings from your radio. It is important that you do not attempt this procedure unless you have a good Internet connection and a reliable mains power supply. If the radio connects to your router using a WiFi connection, make sure that this is also reliable before proceeding.



1. The 'Software update' option is accessed via the 'System settings' menu. When you select 'Software update' the menu will display 'Auto check setting' and 'Check now'. If you want your radio to check periodically for new software versions press the Folder Up or Down buttons to highlight 'Auto check settings'. Then press the Select button and select 'YES'. If you do not want your radio to check for updates select the 'NO' option.
2. To check if there are any software updates available currently, press the Folder Up or Down buttons to highlight 'Check now' and then press the Select button. The radio will check to see if an update is available. The display will show 'Checking for new versions'. If there are no updates then the display will show 'Software up to date'. If a software update is available your radio will then offer the choice of updating the software or not, displaying 'New version available. Update software?'. Select the 'YES' option if you wish to go through the update process.
3. If you choose to update your radio it will first download the new software and will then reprogram its internal memory. This may take a few minutes depending on the speed of your internet connection.
4. Once the software update is completed, the radio will prompt you to press Select to restart. Press the Select button and your radio will then restart. You may find that you will need to reconfigure your network connection following an update. You may also need to re-enter all radio station presets, alarm settings, and configuration options.

### VERY IMPORTANT:

Do not switch off the power to the radio until the update operation is complete and the radio has restarted, otherwise the unit may become permanently damaged.

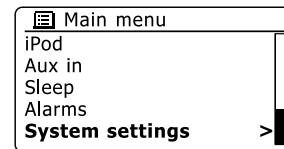

GB

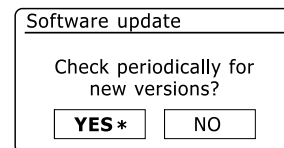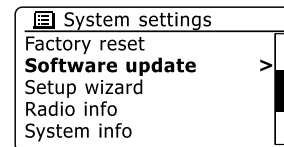


## Network profiles

Each time that you connect your radio to a WiFi network, the radio will store the details of that connection (SSID, security key, DHCP/IP address settings) as a profile. Up to four such profiles are stored in the radio so that if the unit is used in multiple locations there is no need to enter the network settings when returning to a location previously visited. The radio stores the four most recent profiles in memory identified by their SSID. Normally the radio will attempt to connect to one of the stored profiles and only if it is unable to do so will you need to use the Network Wizard. In the event that you visit a location only once you may wish to delete the profile for the network in that location to avoid losing other profiles.

1. Access the menu for the current mode by pressing and holding the Menu button. Press the Folder Up or Down buttons until 'System settings' is highlighted on the display. Press the Select button to enter the settings menu.
2. Press the Folder Up or Down buttons until 'Network' is highlighted on the display. Press the Select button to enter the Network settings menu.
3. Press the Folder Up or Down buttons until 'Network profile' is highlighted on the display. Press the Select button to see the stored profiles. The profile which is currently in use (if any) is marked with an asterisk.
4. To remove a profile from memory, press the Folder Up or Down buttons to highlight the profile to be deleted and then press the Select button.
5. The radio will offer a 'YES' or 'NO' selection. Press the Folder Up or Down buttons to select 'YES' and then press the Select button. The selected profile will be deleted.


**Note:** that it is not possible to delete a profile which is currently in use.

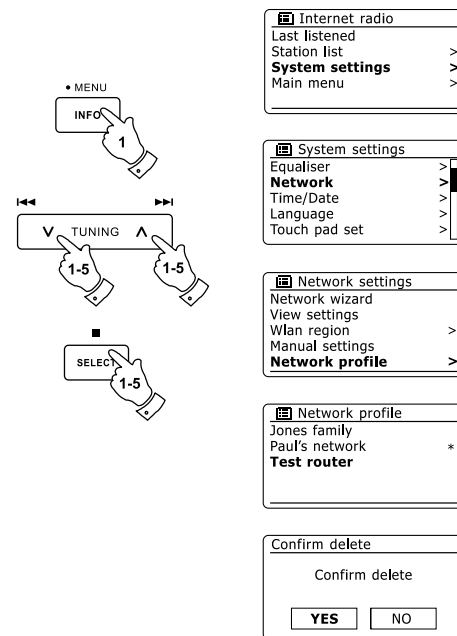

## Software version display

The software version display is provided for reference and customer support purposes and cannot be changed.


1. Access the menu for the current mode by pressing and holding the Menu button. Press the Folder Up or Down buttons until 'System settings' is highlighted on the display. Press the Select button to enter the System settings menu.
2. Press the Folder Up or Down buttons until 'Radio Info' is highlighted on the display. Press the Select button to display the software version and radio ID. Follow steps 1 and 2 above to view 'System info' for your radio.
3. Press and hold the Menu button to exit.

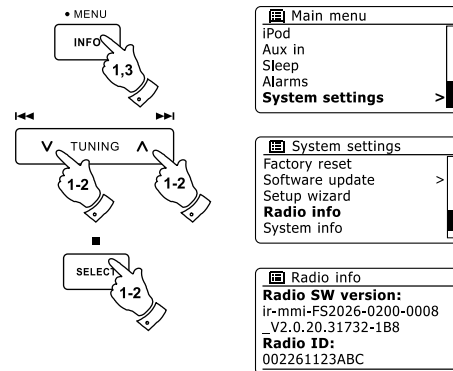

## Audio FAQ

Your radio can access some audio help for Internet Radio use.

1. With your radio switched on and in the Internet Radio mode, press and hold the Menu button. Press the Folder Up or Down buttons until 'Station list' is highlighted on the display. Press the Select button.
2. Press the Folder Up or Down buttons until 'Help' is highlighted on the display. Press the Select button to enter the Help menu.
3. Press the Folder Up or Down buttons until 'FAQ' is highlighted. Press the Select button to display some frequently asked questions.
4. Press the Folder Up or Down buttons to choose a question that suits your requirements and press the Select button to listen to the answer. Adjust the volume as needed.

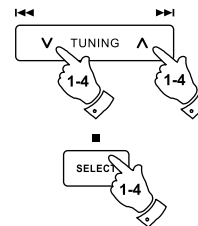

## Accessing your audio files via a UPnP server using Windows Vista and XP



If your computer is running Windows Vista or XP, then Windows Media Player version 11 includes a UPnP server which will make your files available to your radio. There are other UPnP server solutions available for non-Windows users and for Windows users who may wish to use an alternative (see the section of Use with Windows, Apple Mac and Linux). It is beyond the scope of this instruction book to cover all possible options for UPnP. We explain the use of Microsoft's Windows Media Player here since that will be the first choice for the majority of users.

### Set up UPnP access on a Windows PC

1. If your PC is running Microsoft Windows Vista or Windows XP then you can use Microsoft's Windows Media Player version 11 to act as your UPnP (Universal Plug and Play) media server. If not already installed on your PC, Windows Media Player 11 may be downloaded from Microsoft's web site and installed by following the instructions detailed in its installation wizard, or by using Microsoft's Windows Update facility.
2. Once installed, Windows Media Player 11 can create a library from all the media files available to it on your PC. To add new media files to the library, select the 'Library' tab, then 'Add to Library... > Advanced Options', click 'Add', choose the files you wish to add and click 'OK'.

The next step is to connect your radio to Windows Media Player 11 and to configure the program to allow the radio to access your media library.

3. Press the Standby button to switch the unit on. Then press the Media button as needed until the Music Player mode display is shown. The main 'Music Player' menu will then be displayed.

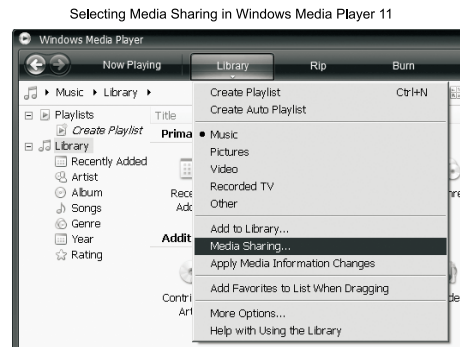



## Set up UPnP access on a Windows PC - cont.

- Press the Folder Up or Down buttons until 'Shared media' is highlighted and press the Select button. The radio will scan for all available UPnP servers. It may take a few seconds for the radio to complete its scan. The radio will display '<Empty>' if no UPnP servers are found.
- After scanning, select your UPnP server using the Folder Up or Down buttons. If you are using WMP 11 as the server, your radio will then normally display 'Unauthorized - Select to retry' at this stage.
- Your PC may prompt you that there has been a connection to your UPnP server. Whether prompted or not, in order that the radio may access the music files, you will need to click the 'Library' tab in WMP 11 and select the 'Media Sharing...' item to open the 'Media Sharing' window. Make sure the box 'Share my media to:' is ticked.
- In the 'Media Sharing' window, the radio will be listed as an unknown device. Click on the unknown device shown to select it, then click the 'Allow' button and then click 'OK'.

### Note:

If you are using Microsoft Windows' firewall software, this should be correctly configured by WMP 11. If you are using third party firewall software you may need to manually configure it to allow your unit and WMP 11 to communicate.

- On the radio, select the named server again using the Folder Up or Down and Select buttons. If WMP 11 is now able to communicate with your radio you will be presented with some media selection options on the display.

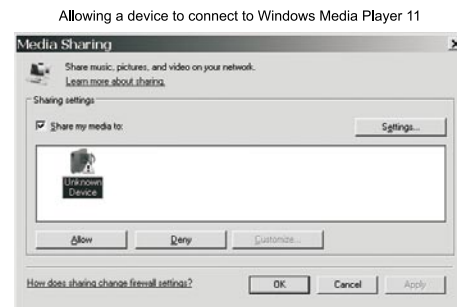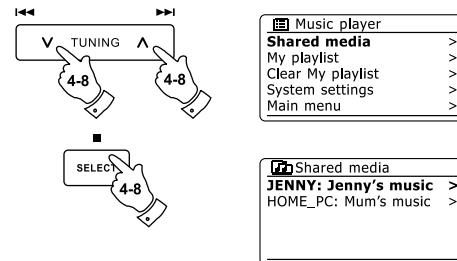

## Audio codecs

Your radio supports a range of audio codecs which provide compatibility with a wide range of Internet Radio stations. These also allow users to stream music from their computers or to play directly from USB and SD/SDHC flash memory devices. Note that for any given audio codec, there are many streaming protocols available, and thus even if an Internet Radio station uses a supported format, this does not guarantee that every such station will work with your radio. The radio stations database to which your radio connects is checked for compatibility so that most stations should be playable without problems. Similarly when streaming media from a computer, while a codec may be supported, there can be many subtle variations in formats, tagging schemes and protocols (even within UPnP). In general your radio will play the supported formats with most common UPnP servers.

## Bit-Rates

The following table summarizes the maximum supported bit-rates for the various audio formats that are playable on your radio. Higher rates may be playable in some cases but performance of the product may be affected.

Codec	Maximum supported rate
AAC (LC)	320 kbits/sec
FLAC (1)	1.5 Mbits/sec
LPCM (2)	1.536 Mbits/sec
MP3	320 kbits/sec
Real Audio	64 kbits/sec
WAV	1.536 Mbits/sec
WMA (3)	320 kbits/sec

All codecs support 2-channel (stereo) coded files only.

All codecs support sample rates up to 48 kbits/sec (includes 32 and 44.1 kbits/sec).

USB and SD/SDHC playback supports MP3 and WMA formats only. Files which have Digital Rights Management (DRM) protection applied will not be playable on your radio.


- (1) 16 and 24 bit samples are supported in FLAC files
- (2) The maximum supported bit-rate is for a 48 kHz sampling, 2 channels and 16-bits per sample.
- (3) WMA Lossless, WMA Voice, WMA 10 Professional, and files which have DRM protection are not supported.

## Cautions

Do not allow your radio to be exposed to water, steam or sand.

Do not leave your radio where excessive heat could cause damage.

The name plate is located on the rear of the radio.

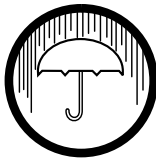

- The radio shall not be exposed to dripping or splashing and no objects filled with liquids, such as vases, shall be placed on the radio.
- It is recommended to operate the product such that there is a minimum distance (10cm recommended) to adjacent objects in order to ensure good ventilation.
- The ventilation of the product should not be restricted by covering it with items such as newspapers, tablecloths, curtains etc.
- No naked flame sources such as lighted candles should be placed on the product.
- It is recommended to avoid using or storing the product at extremes of temperature. Avoid leaving the unit in cars, on windowsills, in direct sunlight etc.
- The radio must be used in a moderate climate.

GB

## Specifications

### Power Requirements

Mains Power supply: AC 100- 240 V/ 50/60 Hz/32W

Remote Control Battery 2 x AAA

### Frequency Coverage

FM 87.5 - 108 MHz

Wired Ethernet 10/100M bits/sec via RJ-45 socket

WiFi 802.11b and 802.11g supported with WEP and WPA/WPA2 encryption  
Compatible with 802.11n routers which offer mixed mode support for 802.11b/g

## Circuit features

Loudspeaker 2x77 mm

Output power 12 Watts x2 (peak)  
6 Watts x 2 (continuous)

Headphone socket 3.5 mm diameter, stereo

Aux In socket 3.5mm diameter, stereo

Line Out socket 3.5mm diameter, stereo

Digital optical output socket Toslink

Aerial System    WiFi    WiFi antenna  
                         FM        Telescopic aerial



*If at any time in the future you should need to dispose of this product please note that: Waste electrical products should not be disposed of with household waste. Please recycle where facilities exist. Check with your Local Authority or retailer for recycling advice. (Waste Electrical and Electronic Equipment Directive)*